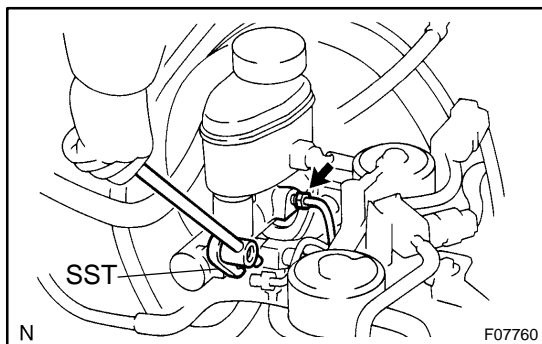


REMOVAL

1. DISCONNECT LEVEL WARNING SWITCH CONNECTOR
2. TAKE OUT FLUID WITH SYRINGE

NOTICE:


Do not let brake fluid remain on a painted surface. Wash it off immediately.

**3. DISCONNECT BRAKE LINES**

Using SST, disconnect the 5 brake lines from the master cylinder and 3-way.

SST 09023-00101

Torque: 15 N·m (155 kgf-cm, 11 ft-lbf)

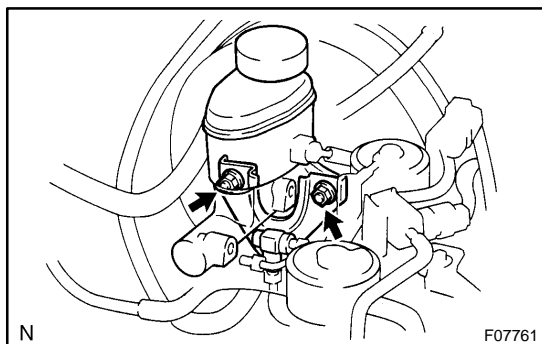**4. REMOVE MASTER CYLINDER**

- (a) Remove the 2 nuts, wire harness bracket, 3-way and check valve bracket.

Torque: 13 N·m (130 kgf-cm, 9 ft-lbf)

- (b) Pull out the master cylinder from the brake booster.