

DECELERATION SENSOR

REMOVAL

BR1WP-02

1. **Passenger side:**
REMOVE FRONT SEAT (See page [BO-141](#), [BO-155](#), [BO-166](#), [BO-177](#) or [BO-188](#))
2. **REMOVE DECELERATION SENSOR**
 - (a) Disconnect the connector.
 - (b) Remove the 2 nuts and sensor.
Torque: 12.5 N·m (128 kgf·cm, 9 ft·lbf)