


R13540

## DISASSEMBLY

### 1. REMOVE CYLINDER BOOT SET RINGS AND BOOTS


Using a screwdriver, remove the 4 cylinder boot set rings and boots.

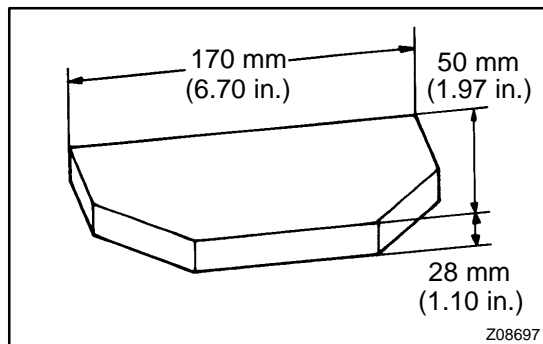

Z08697

### 2. REMOVE PISTONS FROM CYLINDER

(a) Prepare a wooden plate to hold the pistons.

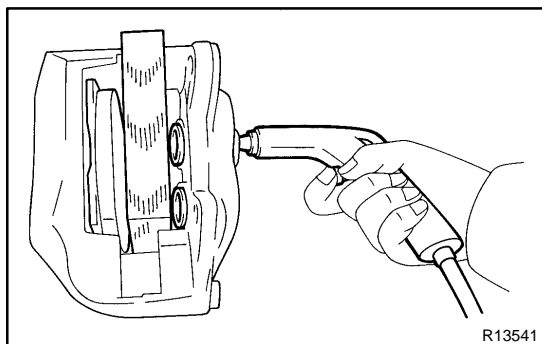


R13541

(b) Place the plate between the pistons and insert a pad at one side.

(c) Use compressed air to remove the pistons alternately from the cylinder.

#### CAUTION:

**Do not place your fingers in front of the pistons when using compressed air.**

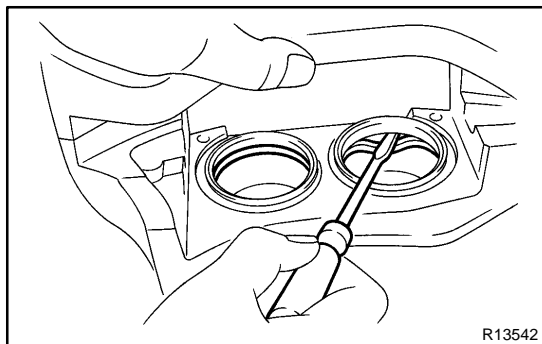

R13542

### 3. REMOVE PISTON SEALS

Using a screwdriver, remove the 4 piston seals from the cylinder.