


DISASSEMBLY


1. REMOVE VALVE BRACKET

- Remove the nut, washer, bolt and 2 plate washers.
- Remove the 2 nuts, 2 washers, set plate and valve bracket from the valve body.

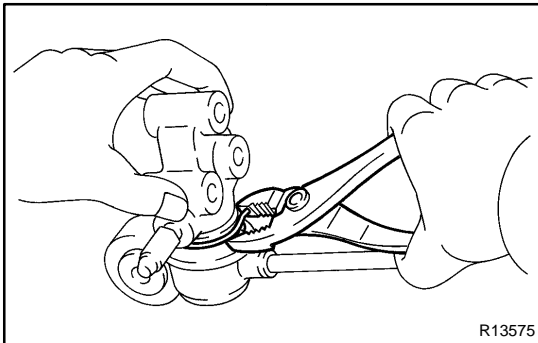


2. DISCONNECT SPRING FROM VALVE

Using pliers, remove the clip, and remove the spring from the valve.

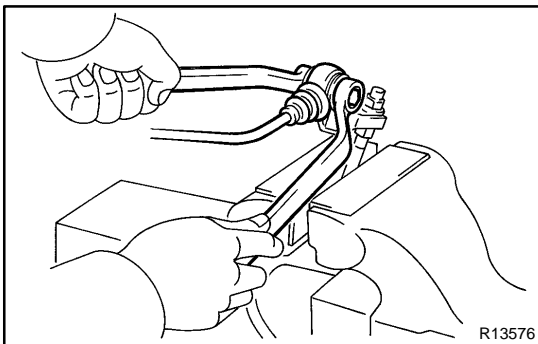

3. REMOVE SHACKLES NO. 1 AND NO. 2

- Remove the nut washer and bolt, and remove the load sensing spring and 2 plate washers.
- Loosen the 2 nuts and plate washer plate, and remove shackle No. 1 from shackle No. 2.

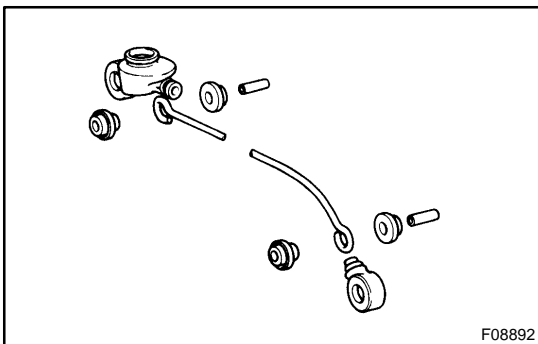

4. DISASSEMBLE LOAD SENSING SPRING

- Remove the 4 bushings and 2 collars.
- Remove the load sensing valve boot and load sensing spring boot.