

YAW RATE SENSOR

BR1WR-02

REMOVAL

1. Passenger side:
REMOVE FRONT SEAT (See page [BO-141](#), [BO-155](#), [BO-166](#), [BO-177](#) or [BO-188](#))
2. REMOVE YAW RATE SENSOR
 - (a) Disconnect the connector.
 - (b) Remove the 2 nuts and sensor.
Torque: 12.5 N·m (128 kgf·cm, 9 ft·lbf)