


INSTALLATION

1. INSTALL CLUTCH RELEASE CYLINDER

Install the clutch release cylinder with the 2 bolts.


Torque: 12 N·m (120 kgf·cm, 9 ft·lbf)

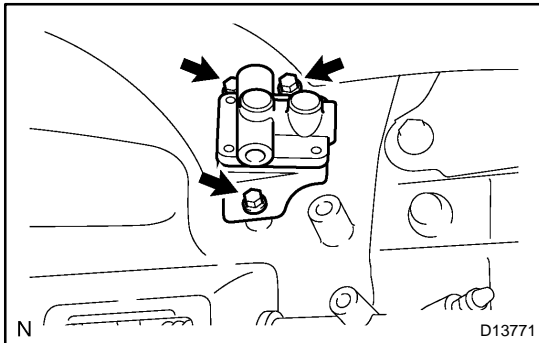

2. INSTALL CLUTCH ACCUMULATOR

(a) Install the clutch accumulator with the 3 bolts.

Torque: 12 N·m (120 kgf·cm, 9 ft·lbf)

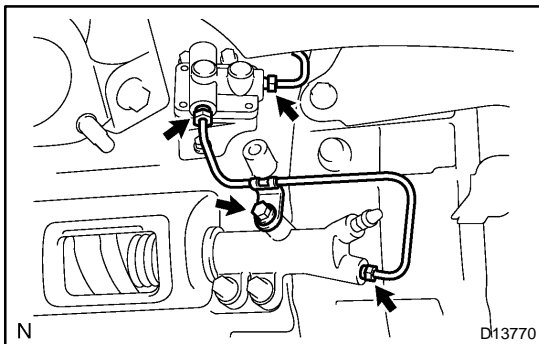


(b) Using SST, connect the clutch lines to the clutch release cylinder and clutch accumulator.

SST 09023-00101

Torque: 15 N·m (155 kgf·cm, 11 ft·lbf)

(c) Install the clamp with the bolt.

Torque: 12 N·m (120 kgf·cm, 9 ft·lbf)

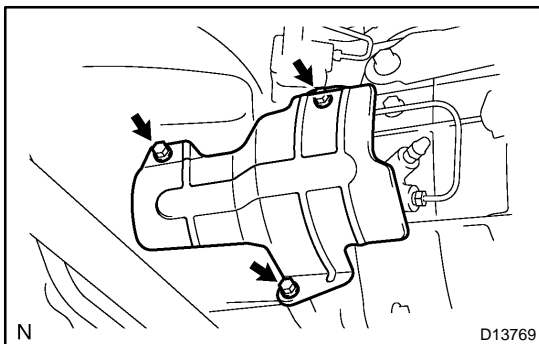

3. INSTALL CLUTCH HOUSING COVER

Install the clutch housing cover with the 3 bolts.

Torque: 12 N·m (120 kgf·cm, 9 ft·lbf)

4. FILL CLUTCH RESERVOIR WITH BRAKE FLUID AND BLEED CLUTCH SYSTEM

5. CHECK FOR LEAKS