

REMOVAL


1. REMOVE FILLER CAP AND FLOAT FROM RESERVOIR
2. DRAW OUT BRAKE FLUID WITH SYRINGE

NOTICE:

Do not let brake fluid remain on a painted surface. If brake fluid spill onto a painted surface, wash it off immediately.

3. REMOVE CLUTCH HOUSING COVER


Remove the 3 bolts and clutch housing cover.

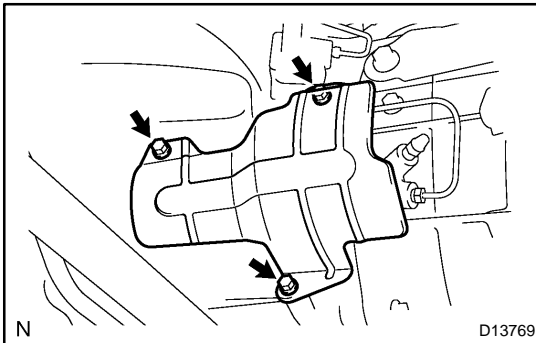


4. REMOVE CLUTCH ACCUMULATOR

- (a) Remove the bolt and clamp.
- (b) Using SST, disconnect the clutch lines from the clutch accumulator and clutch release cylinder. Use a container to catch the fluid.

SST 09023-00101

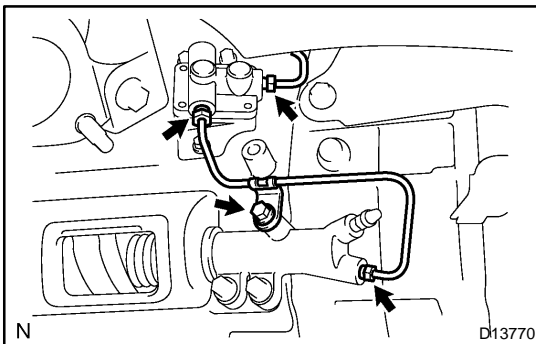

- (c) Remove the 3 bolts and clutch accumulator.

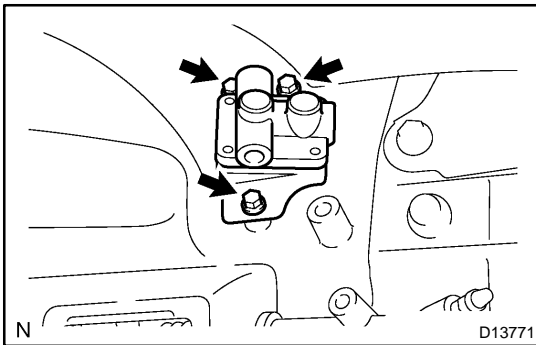

5. REMOVE CLUTCH RELEASE CYLINDER

Remove the 2 bolts and clutch release cylinder.

