

INSPECTION


1. INSPECT WATER PUMP

- Visually check the air hole and water hole for coolant leakage.

If leakage is found, replace the water pump and timing belt.

- Turn the pulley, and check that the water pump bearing moves smoothly and quietly.

If necessary, replace the water pump.

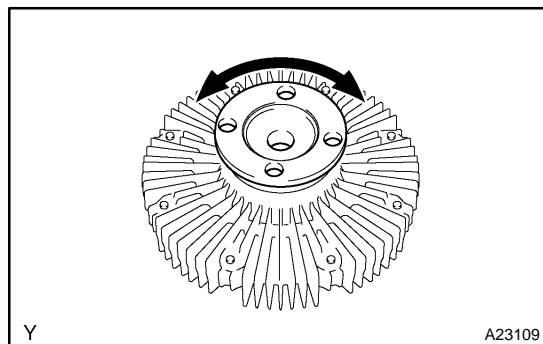

2. INSPECT FLUID COUPLING

- Check that the fluid coupling is not damaged and that no silicon oil leaks.

If necessary, replace the fluid coupling.