

# LIST OF DISABLE A MONITOR

## HINT:

This table indicates ECM monitoring status for the items in the upper columns if the DTCs in each line on the left are being set.

As for the "X" mark, when the DTC on the left is stored, detection of the DTC in the upper column is not performed.

Monitor detected malfunction				Monitor disablement (X - disabled)																															
	Fault code	Fault code	Component/ system	P0010,P0020	P0011	P0012	P0016,P0018	P0021	P0022	P0030,50	P0135,P0155	P0036,56	P0043,44,63,64	P0100	P0101	P0105	P0106	P0110	P0115	P0116	P0120,P0121	P0125	P0128	P0130-P0153	P0134,P0154	P0136,P0156	P0142,P0162	P0171,P0172	P0300-P0308						
				P0010,P0020	P0011	P0012	P0016,P0018	P0021	P0022	P0031,32,51,52	P0031,32,51,52	P0037,38,57,58	P0037,38,57,58	P0043,44,63,64	P0100-P0103	P0101	P0105-P0108	P0106	P0110-P0113	P0115-P0118	P0116	P0120-P0223,P2135	P0125	P0128	P0130-P0153	P0134,P0154	P0136,P0156	P0142,P0162	P0171,P0172	P0300-P0308					
				VVT VSV1,2	VVT System1 -Advance	VVT System1 -Retard	VVT System - Misalignment	VVT System2 - Advance	VVT System2 - Retard	O2 Sensor Heater - Sensor1	A/F Sensor Heater - Sensor1	O2 Sensor Heater - Sensor2	O2 Sensor Heater - Sensor3	MAF sensor	MAP sensor	MAP sensor	IAT sensor	ECT sensor	ECT sensor	TP sensor	Insufficient ECT for Closed Loop	Thermostat	O2 Sensor - Sensor1	O2 Sensor, A/F Sensor(No Activity) - Sensor1	O2 Sensor - Sensor2	O2 Sensor - Sensor3	Fuel system	Misfire							
P0010,P0020	P0010,P0020	VVT VSV1,2																																	
P0011	P0011	VVT System1 - Advance																																	
P0012	P0012	VVT System1 - Retard																																	
P0016,P0018	P0016,P0018	VVT System - Misalignment																																	
P0021	P0021	VVT System2 - Advance																																	
P0022	P0022	VVT System2 - Retard																																	
P0030,50	P0031,32,51,52	O2 Sensor Heater - Sensor1																																	
P0135,P0155	P0031,32,51,52	A/F Sensor Heater - Sensor1																																	
P0036,56	P0037,38,57,58	O2 Sensor Heater - Sensor2																																	
P0043,44,63,64	P0043,44,63,64	O2 Sensor Heater - Sensor3																																	
P0100,P0101	P0100-P0103	MAF sensor																																	
P0105,P0106	P0105-P0108	MAP sensor																																	
P0110	P0110-P0113	IAT sensor																																	
P0115,P0116	P0115-P0118	ECT sensor																																	
P0120,P0121	P0120-P0223,P2135	TP sensor																																	
P0125	P0125	Insufficient ECT for Closed Loop																																	
P0128	P0128	Thermostat																																	
P0130-P0153	P0130-P0153	O2 Sensor - Sensor1																																	
P0134,P0154	P0134,P0154	O2 Sensor, A/F Sensor(No Activity) - Sensor1																																	
P0136,P0156	P0136,P0156	O2 Sensor - Sensor2																																	
P0142,P0162	P0142,P0162	O2 Sensor - Sensor3																																	
P0171,P0172	P0171,P0172	Fuel system																																	
P0300-P0308	P0300-P0308	Misfire																																	
P0325,P0330	P0325-P0333	Knock sensor																																	
P0335	P0335	CKP sensor																																	
P0340, P0341	P0340, P0341	CMP sensor																																	
P0340-P0346	P0340-P0346	VVT sensor1,2																																	
P0351-P0358	P0351-P0358	Ignitor																																	
P0385	P0385	CKP sensor 2																																	
P0401	P0401	EGR system (closed)																																	
P0402	P0402	EGR system (open)																																	
P0405,P0409	P0405-P0409	Lift sensor																																	
P0420,P0430	P0420,P0430	Catalyst																																	
P0442-P0456	P0442-P0456	EVAP system																																	
P0450,P0451	P0450-P0453	EVAP press sensor																																	

Monitor detected malfunction				Monitor disablement (X - disabled)																															
	Fault code																																		
	Fault code																																		
	Component/ system																																		
				P0010,P0020	P0011	P0012	P0016,P0018	P0021	P0022	P0030,50	P0031,32,51,52	P0037,38,57,58	P0043,44,63,64	P0100	P0101	P0105	P0106	P0110	P0115	P0116	P0120,P0121	P0125	P0128	P0130-P0153	P0134,P0154	P0136,P0156	P0142,P0162	P0171,P0172	P0300-P0308						
P0500	P0500	VSS																																	
P0511	P0511	IAC valve																																	
P0510	P0510	Idle switch																																	
P0560	P0560	System Voltage																																	
P0617	P0617	Starter signal																																	
P0705	P0705	Shift lever position switch																																	
P0710	P0710-P0713	Trans fluid temp sensor																																	
P0720-P0793	P0720-P0793	Output speed sensor																																	
P0715-P0717	P0715-P0717	Input speed sensor																																	
P0724	P0724	Stop lamp switch																																	
P0741-P0796	P0741-P0796	Trans solenoid (function)																																	
P0748-P0798	P0748-P0798	Trans solenoid (range)																																	
P0850	P0850	PNP switch																																	
P1010,P1020	P1010,P1020	VVTL																																	
P1011,12,(21,22)	P1011,12,(21,22)	VVTL system1(,2)																																	
P1126	P1126	Electronic magnet clutch																																	
P1129	P1129	Electronic throttle system																																	
P1430	P1430	HC adsorber ACT press sensor																																	
P2004,6	P2004,6	Intake Manifold Runner Control																																	
P2009,10	P2009,10	Intake Manifold Runner Control Circuit																																	
P2014,16,17	P2014,16,17	Intake Manifold Runner Position Sensor																																	
P2102,P2103	P2102,P2103	Throttle motor																																	
P2120-P2138	P2120-P2138	Accel position sensor																																	
P2196,P2198	P2196,P2198	A/F sensor (rationality)																																	
P2226	P2226	BARO sensor																																	
P2237,P2240	P2237,P2240	A/F sensor (open)																																	
P2423,24	P2423,24	HC Adsorption Catalyst																																	
P2430,2,3	P2430,2,3	AIR Pressure Sensor(Low/High)																																	
P2431	P2431	AIR Pressure Sensor(Rationality)																																	
P2440	P2440	AIR control valve stuck open																																	
P2441	P2441	AIR control valve stuck close																																	
P2444	P2444	AIP stuck On																																	
P2445	P2445	AIP stuck Off																																	
P2714-P2759	P2714-P2759	Trans solenoid(SLU-SLD)																																	
P2A00,P2A03	P2A00,P2A03	A/F sensor (slow response)																																	

			Monitor disablement (X - disabled)																									
Monitor detected malfunction	Fault code																											
	Component/ system		Knock sensor	CKP sensor	CMP sensor	VVT sensor1,2	Ignitor	CKP sensor 2	EGR system (closed)	EGR system (open)	EGR Lift sensor	EGR Lift sensor	Catalyst	EVAP system	EVAP press sensor	VSS(ECT2sensor)	VSS(ECT1sensor, non-ECT)	VSS(M/T)	IAC valve	Idle switch	System Voltage	Starter signal	Shift lever position switch	Trans fluid temp sensor	Output speed sensor	Input speed sensor	Stop lamp switch	Trans solenoid (function)*1
P0010,P0020	P0010,P0020	VVT VSV1,2																										X
P0011	P0011	VVT System1 - Advance							X	X			X	X					X									
P0012	P0012	VVT System1 - Retard							X	X			X	X					X									
P0016,P0018	P0016,P0018	VVT System - Misalignment																										
P0021	P0021	VVT System2 - Advance							X	X			X	X					X									
P0022	P0022	VVT System2 - Retard							X	X			X	X					X									
P0030,50	P0031,32,51,52	O2 Sensor Heater - Sensor1							X	X			X						X									X
P0135,P0155	P0031,32,51,52	A/F Sensor Heater - Sensor1							X	X			X						X									
P0036,56	P0037,38,57,58	O2 Sensor Heater - Sensor2											X															
P0043,44,63,64	P0043,44,63,64	O2 Sensor Heater - Sensor3																										
P0100,P0101	P0100-P0103	MAF sensor							X	X			X	X				X	X									X
P0105,P0106	P0105-P0108	MAP sensor							X	X			X	X				X	X									X
P0110	P0110-P0113	IAT sensor							X	X			X															X
P0115,P0116	P0115-P0118	ECT sensor							X	X	X	X	X					X	X									X
P0120,P0121	P0120-P0223,P2135	TP sensor							X	X			X	X			X		X									X
P0125	P0125	Insufficient ECT for Closed Loop							X	X	X	X	X					X	X									X
P0128	P0128	Thermostat																										
P0130-P0153	P0130-P0153	O2 Sensor - Sensor1							X	X			X						X									X
P0134,P0154	P0134,P0154	O2 Sensor, A/F Sensor(No Activity) - Sensor1							X	X			X						X									X
P0136,P0156	P0136,P0156	O2 Sensor - Sensor2											X															
P0142,P0162	P0142,P0162	O2 Sensor - Sensor3																										
P0171,P0172	P0171,P0172	Fuel system							X	X			X	X					X									X
P0300-P0308	P0300-P0308	Misfire											X	X					X									X
P0325,P0330	P0325-P0333	Knock sensor							X	X																		X
P0335	P0335	CKP sensor							X	X			X	X					X									X
P0340, P0341	P0340, P0341	CMP sensor							X	X			X	X					X									X
P0340-P0346	P0340-P0346	VVT sensor1,2																										
P0351-P0358	P0351-P0358	Ignitor							X	X			X	X					X									X
P0385	P0385	CKP sensor 2							X	X			X	X					X									
P0401	P0401	EGR system (closed)											X															X
P0402	P0402	EGR system (open)											X	X					X									X
P0405,P0409	P0405-P0409	Lift sensor																										
P0420,P0430	P0420,P0430	Catalyst																										
P0442-P0456	P0442-P0456	EVAP system																	X									
P0450,P0451	P0450-P0453	EVAP press sensor											X															

			Monitor disablement (X - disabled)															
Monitor detected malfunction	Fault code																	
	Fault code																	
	Component/ system																	
			P0325-P0330	P0335	P0340-P0341	P0340-P0346	P0351-P0358	P0385	P0401	P0402	P0405	P0409	P0420-P0430	P0440-P0446	P0450-P0451	P0500	P0511	P0510
	P0500	P0500	VSS	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X
	P0511	P0511	IAC valve															
	P0510	P0510	Idle switch															
	P0560	P0560	System Voltage															
	P0617	P0617	Starter signal															
	P0705	P0705	Shift lever position switch															
	P0710	P0710-P0713	Trans fluid temp sensor															
	P0720-P0793	P0720-P0793	Output speed sensor															
	P0715-P0717	P0715-P0717	Input speed sensor															
	P0724	P0724	Stop lamp switch															
	P0741-P0796	P0741-P0796	Trans solenoid (function)															
	P0748-P0798	P0748-P0798	Trans solenoid (range)															
	P0850	P0850	PNP switch															
	P1010,P1020	P1010,P1020	VVTL															
	P1011,12,(21,22)	P1011,12,(21,22)	VVTL system1(,2)															
	P1126	P1126	Electronic magnet clutch															
	P1129	P1129	Electronic throttle system															
	P1430	P1430	HC adsorber ACT press sensor															
	P2004,6	P2004,6	Intake Manifold Runner Control															
	P2009,10	P2009,10	Intake Manifold Runner Control Circuit															
	P2014,16,17	P2014,16,17	Intake Manifold Runner Position Sensor															
	P2102,P2103	P2102,P2103	Throttle motor															
	P2120-P2138	P2120-P2138	Accel position sensor															
	P2196,P2198	P2196,P2198	A/F sensor (rationality)															
	P2226	P2226	BARO sensor															
	P2237,P2240	P2237,P2240	A/F sensor (open)															
	P2423,24	P2423,24	HC Adsorption Catalyst															
	P2430,2,3	P2430,2,3	AIR Pressure Sensor(Low/High)															
	P2431	P2431	AIR Pressure Sensor(Rationality)															
	P2440	P2440	AIR control valve stuck open															
	P2441	P2441	AIR control valve stuck close															
	P2444	P2444	AIP stuck On															
	P2445	P2445	AIP stuck Off															
	P2714-P2759	P2714-P2759	Trans solenoid(SLU-SLD)															
	P2A00,P2A03	P2A00,P2A03	A/F sensor (slow response)															

Monitor detected malfunction	Fault code		Monitor disablement (X - disabled)	
	Fault code		Monitor disablement (X - disabled)	
	Component/ system		Monitor disablement (X - disabled)	
P0010,P0020	P0010,P0020	VVT VSV1,2		
P0011	P0011	VVT System1 - Advance		
P0012	P0012	VVT System1 - Retard		
P0016,P0018	P0016,P0018	VVT System - Misalignment		
P0021	P0021	VVT System2 - Advance		
P0022	P0022	VVT System2 - Retard		
P0030,50	P0031,32,51,52	O2 Sensor Heater - Sensor1		
P0135,P0155	P0031,32,51,52	A/F Sensor Heater - Sensor1		
P0036,56	P0037,38,57,58	O2 Sensor Heater - Sensor2		
P0043,44,63,64	P0043,44,63,64	O2 Sensor Heater - Sensor3		
P0100,P0101	P0100-P0103	MAF sensor		
P0105,P0106	P0105-P0108	MAP sensor		
P0110	P0110-P0113	IAT sensor		
P0115,P0116	P0115-P0118	ECT sensor		
P0120,P0121	P0120-P0223,P2135	TP sensor		
P0125	P0125	Insufficient ECT for Closed Loop		
P0128	P0128	Thermostat		
P0130-P0153	P0130-P0153	O2 Sensor - Sensor1		
P0134,P0154	P0134,P0154	O2 Sensor, A/F Sensor(No Activity) - Sensor1		
P0136,P0156	P0136,P0156	O2 Sensor - Sensor2		
P0142,P0162	P0142,P0162	O2 Sensor - Sensor3		
P0171,P0172	P0171,P0172	Fuel system		
P0300-P0308	P0300-P0308	Misfire		
P0325,P0330	P0325-P0333	Knock sensor		
P0335	P0335	CKP sensor		
P0340, P0341	P0340, P0341	CMP sensor		
P0340-P0346	P0340-P0346	VVT sensor1,2		
P0351-P0358	P0351-P0358	Ignitor		
P0385	P0385	CKP sensor 2		
P0401	P0401	EGR system (closed)		
P0402	P0402	EGR system (open)		
P0405,P0409	P0405-P0409	Lift sensor		
P0420,P0430	P0420,P0430	Catalyst		
P0442-P0456	P0442-P0456	EVAP system		
P0450,P0451	P0450-P0453	EVAP press sensor		

			Monitor disablement (X - disabled)	
Monitor detected malfunction	Fault code			
		Fault code		
		Component/ system		
P0500	P0500	VSS	X	
P0511	P0511	IAC valve		
P0510	P0510	Idle switch		
P0560	P0560	System Voltage		
P0617	P0617	Starter signal		
P0705	P0705	Shift lever position switch		
P0710	P0710-P0713	Trans fluid temp sensor		
P0720-P0793	P0720-P0793	Output speed sensor		
P0715-P0717	P0715-P0717	Input speed sensor		
P0724	P0724	Stop lamp switch		
P0741-P0796	P0741-P0796	Trans solenoid (function)		
P0748-P0798	P0748-P0798	Trans solenoid (range)	X	
P0850	P0850	PNP switch		
P1010,P1020	P1010,P1020	VVTL		
P1011,12,(21,22)	P1011,12,(21,22)	VVTL system1(,2)		
P1126	P1126	Electronic magnet clutch		
P1129	P1129	Electronic throttle system		
P1430	P1430	HC adsorber ACT press sensor		
P2004,6	P2004,6	Intake Manifold Runner Control		
P2009,10	P2009,10	Intake Manifold Runner Control Circuit		
P2014,16,17	P2014,16,17	Intake Manifold Runner Position Sensor		
P2102,P2103	P2102,P2103	Throttle motor		
P2120-P2138	P2120-P2138	Accel position sensor		
P2196,P2198	P2196,P2198	A/F sensor (rationality)		
P2226	P2226	BARO sensor		
P2237,P2240	P2237,P2240	A/F sensor (open)		
P2423,24	P2423,24	HC Adsorption Catalyst		
P2430,2,3	P2430,2,3	AIR Pressure Sensor(Low/High)		
P2431	P2431	AIR Pressure Sensor(Rationality)		
P2440	P2440	AIR control valve stuck open		
P2441	P2441	AIR control valve stuck close		
P2444	P2444	AIP stuck On		
P2445	P2445	AIP stuck Off		
P2714-P2759	P2714-P2759	Trans solenoid(SLU-SLD)		
P2A00,P2A03	P2A00,P2A03	A/F sensor (slow response)		