


## DISASSEMBLY

### 1. REMOVE PRESSURE SENSOR

- (a) Remove the vacuum hose from the pressure sensor and air switching valve.
- (b) Remove the 2 bolts and pressure sensor from the air switching valve.

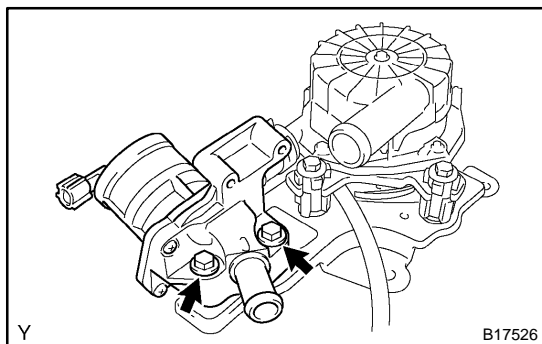

### 2. REMOVE AIR SWITCHING VALVE

- (a) Remove the 2 bolts and air switching valve from the air pump bracket.
- (b) Remove the No.1 air hose from the air switching valve and air pump.