

REMOVAL

1. REMOVE HEATED OXYGEN SENSOR (BANK 1)

- (a) Disconnect the heated oxygen sensor.
- (b) Remove the heated oxygen sensor.

2. REMOVE HEATED OXYGEN SENSOR (BANK2)

- (a) Disconnect the heated oxygen sensor connector.
- (b) Remove the heated oxygen sensor.

3. SEPARATE EXHAUST CENTER PIPE

Remove the 4 bolts and 2 gasket from the exhaust center pipe.

4. REMOVE RH FRONT EXHAUST PIPE

Remove the 3 nuts, gasket, and front exhaust pipe from the exhaust manifold.

5. REMOVE LH FRONT EXHAUST PIPE

Remove the 3 nuts, gasket, ring and front exhaust pipe from the exhaust manifold.

6. REMOVE CENTER EXHAUST PIPE

- (a) Loosen the clamp bolt, disconnect the center exhaust pipe and remove the gasket from the exhaust tailpipe.
- (b) Remove the 2 rings and center exhaust pipe.

7. REMOVE EXHAUST TAILPIPE

- (a) Remove the 3 rings and exhaust tailpipe.

8. REMOVE HEAT INSULATOR

- (a) Remove the 5 bolts and No.1 heat insulator.
- (b) Remove the 4 bolts and No.2 heat insulator.
- (c) Remove the 3 bolts and No.3 heat insulator.
- (d) Remove the 2 bolts and No.4 heat insulator.