


INSTALLATION

1. INSTALL CRANKSHAFT POSITION SENSOR

- (a) Apply a light coat of engine oil to an O-ring of the crankshaft position sensor.
- (b) Install the crankshaft position sensor with the bolt.
Torque: 10 N·m (102 kgf·cm, 7 ft·lbf)
- (c) Connect the crankshaft position sensor connector.

2. INSTALL COOLER COMPRESSOR

- (a) Install the cooler compressor assy with the 4 bolts.
Torque: 25 N·m (255 kgf·cm, 18 ft·lbf)
- (b) Connect the cooler compressor assy connector.

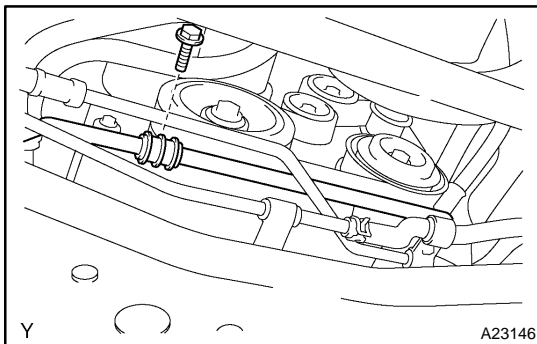

- (c) Install the suction hose sub-assy with the bolt.
Torque: 8.0 N·m (82 kgf·cm, 71 in·lbf)

3. INSTALL GENERATOR (See page [CH-15](#))

4. INSTALL ENGINE UNDER COVER