



INSTALLATION

1. **INSTALL IGNITION COIL**
 - (a) Install the ignition coil with the bolt.
Torque: 10 N·m (102 kgf·cm, 7 ft·lbf)
 - (b) Connect the ignition coil connector.
2. **INSTALL INTAKE AIR SURGE TANK**
(See page [EM-89](#))
3. **INSTALL AIR CLEANER** (See page [EM-89](#))
4. **INSTALL V-BANK COVER**