



## INSTALLATION

### 1. INSTALL CAMSHAFT POSITION SENSOR

Install the camshaft position sensor with the bolt and stud bolt

**Torque: 7.5 N·m (80 kgf·cm, 66 in.-lbf)**

### 2. INSTALL LH NO.3 TIMING BELT COVER

(See page [EM-23](#))

### 3. INSTALL DRIVE BELT

(See page [CH-16](#) and [CH-28](#))

### 4. FILL ENGINE COOLANT (See page [CO-2](#))

### 5. CHECK ENGINE COOLANT FOR LEAKS

### 6. CHECK IGNITION TIMING (See page [EM-9](#))