


INSPECTION

NOTICE:

”Cold” and ”Hot” in these sentences express the temperature of the coils themselves. ”Cold” is from –10°C (14°F) to 50°C (122°F) and ”Hot” is from 50°C (122°F) to 100°C (212°F).

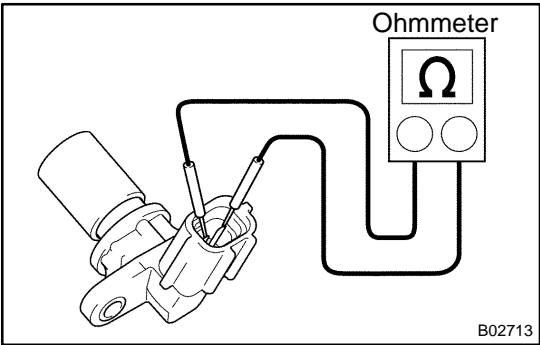

INSPECT CRANKSHAFT POSITION SENSOR

Using an ohmmeter, measure the resistance between the terminals.

Resistance:

Cold	1,630 to 2,740 Ω
Hot	2,065 to 3,225 Ω

If the resistance is not as specified, replace the crankshaft position sensor.