



## INSTALLATION

### 1. INSTALL CRANKSHAFT POSITION SENSOR

- (a) Install the crankshaft position sensor with the bolt.

**Torque: 6.5 N·m (65 kgf·cm, 58 in.-lbf)**

- (b) Connect the crankshaft position sensor connector.

### 2. INSTALL ENGINE UNDER COVER