



## INSTALLATION

### 1. INSTALL IGNITION COILS (WITH IGNITER)

Install the ignition coil (with igniter) with the bolt. Install the 8 ignition coils (with igniter).

**Torque: 7.5 N·m (76 kgf·cm, 66 in.-lbf)**

### 2. CONNECT IGNITION COIL (WITH IGNITER) CONNECTORS