



REMOVAL

1. **DISCONNECT IGNITION COIL (WITH IGNITER) CONNECTORS**
2. **REMOVE IGNITION COILS (WITH IGNITER)**

Remove the bolt, and pull out the ignition coil (with igniter). Remove the 8 ignition coils (with igniter).