

TROUBLESHOOTING

PROBLEM SYMPTOMS TABLE

MTOHN-01

Use the table below to help find the cause of the problem. The numbers indicate the priority of the likely causes of the problem. Check each part in order. If necessary, replace these parts.

Symptom	Suspected Area	See page
Noise	1. Oil (Level low) 2. Oil (Wrong) 3. Gear (Worn or damaged) 4. Bearing (Worn or damaged)	MT-7 MT-7 MT-10 MT-10
Oil leakage	1. Oil (Level too high) 2. Gasket (Damaged) 3. Oil seal (Worn or damaged) 4. O-ring (Worn or damaged)	MT-7 MT-10 MT-10 MT-10
Hard to shift or will not shift	1. Synchronizer ring (Worn or damaged) 2. Shift key spring (Damaged)	MT-34 MT-52 MT-34 MT-52
Jumps out of gear	1. Locking ball spring (Damaged) 2. Shift fork (Worn) 3. Gear (Worn or damaged) 4. Bearing (Worn or damaged)	MT-61 MT-34 MT-52 MT-10 MT-10