

 
 

 

 


 








 

 
 

 
 
 
# SUSPENSION AND AXLE


 
 
 
 
 
 

 
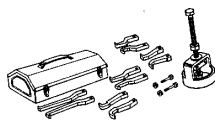 
 
 
 
## SST (Special Service Tools)

PP25D-04

 




 
 
 
 
 

 

	09023-00101 Union Nut Wrench 10mm	Rear axle
	09223-15020 Oil Seal & Bearing Replacer	Front differential
	09223-15030 Oil Seal & Bearing Replacer	Front axle
	09223-56010 Crankshaft Rear Oil Seal Replacer	Rear axle
	09226-10010 Crankshaft Front & Rear Bearing Replacer	Front differential
	09240-00020 Wire Gauge Set	Front drive shaft
	09308-00010 Oil Seal Puller	Front differential Rear axle
	09308-10010 Oil Seal Puller	Front differential Rear differential
	09309-37010 Transmission Bearing Replacer	Front differential Front suspension
	09316-12010 Transfer Bearing Replacer	Rear differential
	09316-60011 Transmission & Transfer Bearing Replacer	Rear axle
	(09316-00051) Replacer "D"	

 

 
 
 
 
 
 
 
 



## PREPARATION – SUSPENSION AND AXLE

	09318-12010	Transfer Bearing Adjusting Nut Wrench	Front axle (2WD)
	09330-00021	Companion Flange Holding Tool	Front differential Rear differential
	09350-20015	TOYOTA Automatic Transmission Tool Set	Front differential
	(09369-20040)	Piston Spring Compressor Set	
	09502-12010	Differential Bearing Replacer	Front differential Front suspension
	09504-22012	Differential Side Bearing Replacer	Rear differential
	09506-30012	Differential Drive Pinion Rear Bearing Cone Replacer	Front differential
	09506-35010	Differential Drive Pinion Rear Bearing Replacer	Rear differential
	09515-30010	Rear Wheel Bearing Replacer	Rear axle
	09520-01010	Drive Shaft Remover Attachment	Front drive shaft
	09520-24010	Differential Side Gear Shaft Puller	Front drive shaft
	(09520-32040)	Shocker Set	
	09521-24010	Drive Shaft Boot Clamping Tool	Front drive shaft

 
 

 
 
 
 
 
 
 
 

 
	09521-25011 Rear Axle Shaft Puller	Rear axle
	09523-36010 Rear Axle Hub Guide Tool	Rear differential
	09527-17011 Rear Axle Shaft Bearing Remover	Front axle
	09554-22010 Differential Oil Seal Replacer	Front differential
	09556-22010 Drive Pinion Front Bearing Remover	Front differential Rear differential
	09564-32011 Differential Preload Adaptor	Front differential
	09570-22011 Differential Mounting Cushion Remover & Replacer	Front differential
	09608-32010 Steering Knuckle Oil Seal Replacer	Front differential
	09610-20012 Pitman Arm Puller	Front suspension
	09612-65014 Steering Worm Bearing Puller	Front differential
	(09612-01020) Claw "B"	
	(09612-01050) Hanger Pin with Nut	
	09613-26010 Steering Worm Bearing Cone Remover	Front suspension

 








 


 
## PREPARATION – SUSPENSION AND AXLE

	09628-62011 Ball Joint Puller	Front drive shaft Front suspension
	09630-24014 Steering Rack Oil Seal Tool Set	Rear suspension
	(09620-24041) Seal Ring Guide	
	09631-12090 Seal Ring Tool	Front suspension
	09631-20060 Bearing Guide Nut Wrench	Front suspension
	09632-36010 Steering Vane Pump Bearing Replacer	Front suspension Rear suspension
	09636-20010 Upper Ball Joint Dust Cover Replacer	Front differential
	09649-17010 Steering Knuckle Tool	Front axle Rear differential
	09650-17011 Hub Bolt Remover	Front axle Rear axle
	09710-28012 Front Suspension Bushing Tool Set	Rear suspension
	(09710-07062) Bushing Replacer	
	09710-30021 Suspension Bushing Tool Set	
	(09710-03051) Bushing Replacer	Front axle Front suspension

 


 

	09710-30041 Rear Suspension Bushing Tool Set	Rear suspension
	(09710-03211) Remover	
	09727-30021 Coil Spring Compressor	Front suspension
	(09727-00010) Bolt Set	
	(09727-00021) Arm Set	
	(09727-00031) Compressor	
	09922-10010 Variable Open Wrench	Front suspension
	09950-00020 Bearing Remover	Front drive shaft Front differential Front suspension Rear differential
	09950-30012 Puller A Set	
	(09951-03010) Upper Plate	Front differential Rear differential
	(09953-03010) Center Bolt	Front differential Rear differential
	(09954-03010) Arm	Front differential Rear differential
	(09955-03030) Lower Plate 130	Front differential Rear differential

## PREPARATION – SUSPENSION AND AXLE

	(09956-03020) Adapter 18	Front differential
	(09956-03050) Adapter 24	Rear differential
	09950-40011 Puller B Set	
	(09951-04010) Hanger 150	Front axle Front differential Front suspension Rear differential
	(09951-04020) Hanger 200	Front axle
	(09952-04010) Slide Arm	Front axle Front differential Front suspension Rear differential
	(09953-04020) Center Bolt 150	Front axle Front differential Front suspension Rear differential
	(09954-04010) Arm 25	Front axle Front differential Front suspension Rear differential
	(09955-04011) Claw No.1	Front differential
	(09955-04031) Claw No.3	Front axle Front suspension
	(09955-04061) Claw No.6	Front differential Rear differential
	(09957-04010) Attachment	Front axle Front differential Front suspension Rear differential
	(09958-04011) Holder	Front axle Front differential Front suspension Rear differential

	09950-60010 Replacer Set	
	(09951-00350) Replacer 35	Rear suspension
	(09951-00380) Replacer 38	Front differential
	(09951-00480) Replacer 48	Front differential Rear differential
	(09951-00540) Replacer 54	Front differential
	(09951-00560) Replacer 56	Rear axle
	(09951-00610) Replacer 61	Rear axle
	(09951-00640) Replacer 64	Rear differential
	(09951-00650) Replacer 65	Front axle Front differential
	09950-60020 Replacer Set No.2	
	(09951-00680) Replacer 68	Front suspension
	(09951-00710) Replacer 71	Rear axle Rear differential
	(09951-00790) Replacer 79	Front differential

## PREPARATION – SUSPENSION AND AXLE

	(09951-00810) Replacer 81	Front axle
	(09951-00890) Replacer 89	Rear axle
	(09951-00910) Replacer 91	Front axle Rear differential
	09950-70010 Handle Set	Front axle, Front differential Rear axle Rear differential Rear suspension
	(09951-07150) Handle 150	