 
 



 

 

 
 
 
 
 
 
 
 
 

 
 


 
 


TRANSFER

 
 

SST (Special Service Tools)

PP43Y-01

	09223-15020 Oil Seal & Bearing Replacer	PLANETARY GEAR
	09316-60011 Transmission & Transfer Bearing Replacer	OIL SEAL REAR OUTPUT SHAFT
	(09316-00011) Replacer Pipe	OIL SEAL REAR OUTPUT SHAFT
	(09316-00071) Replacer "F"	REAR OUTPUT SHAFT
	09330-00021 Companion Flange Holding Tool	TRANSFER ASSEMBLY
	09515-30010 Rear Wheel Bearing Replacer	PLANETARY GEAR
	09554-22010 Differential Oil Seal Replacer	OIL SEAL
	09554-30011 Differential Oil Seal Replacer	PLANETARY GEAR
	09555-55010 Differential Drive Pinion Bearing Replacer	PLANETARY GEAR REAR OUTPUT SHAFT DRIVEN SPROCKET
	09612-65014 Steering Worm Bearing Puller	PLANETARY GEAR
	(09612-01030) Claw "C"	PLANETARY GEAR
	(09612-01050) Hanger Pin with Nut	PLANETARY GEAR

	09950-40011 Puller B Set	TRANSFER ASSEMBLY
	(09951-04020) Hanger 200	TRANSFER ASSEMBLY
	(09952-04010) Slide Arm	TRANSFER ASSEMBLY
	(09953-04030) Center Bolt 200	TRANSFER ASSEMBLY
	(09954-04010) Arm 25	TRANSFER ASSEMBLY
	(09955-04051) Claw No.5	TRANSFER ASSEMBLY
	(09957-04010) Attachment	TRANSFER ASSEMBLY
	(09958-04011) Holder	TRANSFER ASSEMBLY
	09950-60010 Replacer Set	OIL SEAL PLANETARY GEAR
	(09951-00220) Replacer 22	OIL SEAL
	(09951-00350) Replacer 35	OIL SEAL
	(09951-00570) Replacer 57	PLANETARY GEAR
	(09951-00590) Replacer 59	OIL SEAL

PREPARATION - TRANSFER

	(09952-06010) Adapter	OIL SEAL
	09950-70010 Handle Set	OIL SEAL PLANETARY GEAR
	(09951-07100) Handle 100	OIL SEAL PLANETARY GEAR