


INSTALLATION

1. INSTALL PROPELLER SHAFT

- Remove SST from the transmission.
SST 09325-40010
- Insert the yoke into the transmission.

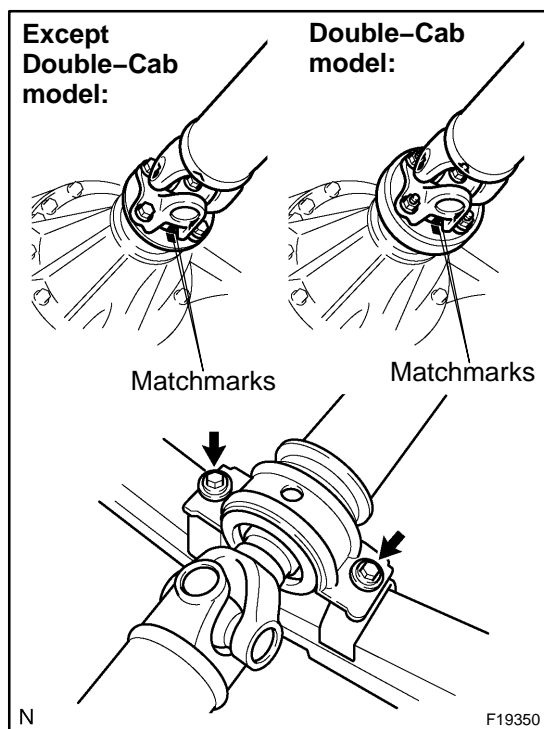


- Temporarily install the center support bearing with the 2 mounting bolts.

HINT:

Make sure the bearing is installed with the drain hole facing downwards.


- Except Double-Cab model:
Align the matchmarks on the flanges and connect the flanges with the 4 bolts, washers and nuts.
Torque the 4 bolts.
Torque: 88 N·m (897 kgf-cm, 65 ft-lbf)
- Double-Cab model:
Align the matchmarks on the flanges and connect the flanges with the 4 washers and nuts.
Torque the 4 nuts.
Torque: 88 N·m (897 kgf-cm, 65 ft-lbf)

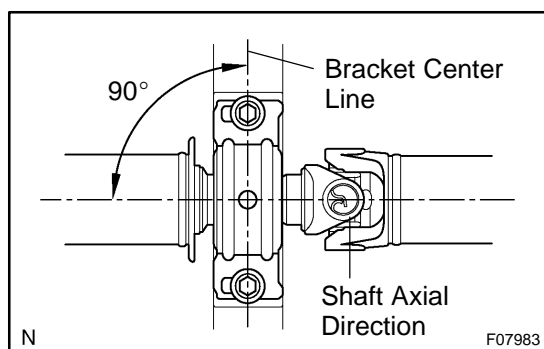

2. ADJUST CENTER SUPPORT BEARING

HINT:

- With the vehicle unloaded, adjust the center support bearing to keep the angles, as shown.
- Under the same conditions, check the center line in the axial direction. Adjust the bearing if necessary.

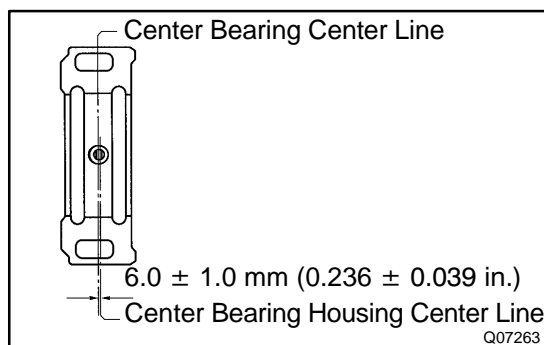

- The center bearing center line and center bearing housing center line must be adjusted to within 6.0 ± 1.0 mm (0.236 ± 0.039 in.) of each other in the vehicle's longitudinal direction with the vehicle unloaded.

Torque the 2 bolts.

Torque: 40 N·m (410 kgf-cm, 30 ft-lbf)