

DISASSEMBLY


NOTICE:

Be careful not to grip the propeller shaft tube too tightly in a vise as this will cause deformation.

1. Rear propeller shaft:

SEPARATE PROPELLER SHAFT AND INTERMEDIATE SHAFT


- (a) Place matchmarks on the flanges.
- (b) Remove the 4 nuts, bolts and washers.

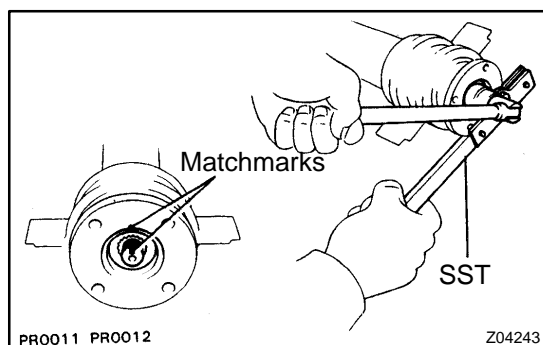

2. Rear propeller shaft:

REMOVE CENTER SUPPORT BEARING FROM INTERMEDIATE SHAFT

- (a) Using a hammer and chisel, loosen the staked part of the nut.
- (b) Using SST to hold the flange, remove the nut and spacer.
SST 09330-00021
- (c) Place matchmarks on the flange and shaft.

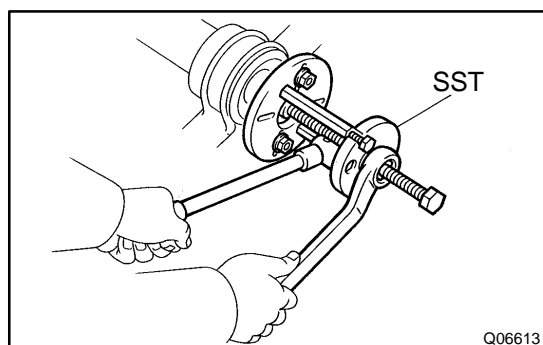

- (d) Using SST, remove the flange from the intermediate shaft.
SST 09950-30012 (09951-03010, 09953-03010, 09954-03010, 09955-03030, 09956-03020)
- (e) Remove the spacer and center support bearing from the intermediate shaft.