


## REMOVAL

### 1. REMOVE FRONT PROPELLER SHAFT

- (a) Place matchmarks on the differential and propeller shaft flange.
- (b) Remove the 4 bolts, washers and nuts, and disconnect the propeller shaft from the differential.
- (c) Use a rope to suspend the front edge of the propeller shaft.
- (d) Place matchmarks on the transfer and propeller shaft flanges.
- (e) Remove the 4 nuts and washers.
- (f) Remove the propeller shaft from the transfer flange.

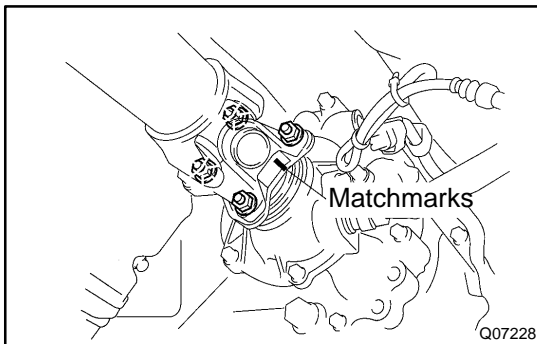

### 2. REMOVE REAR PROPELLER SHAFT

- (a) Place matchmarks on the transfer and propeller shaft flanges.
- (b) Remove the 4 nuts and washers, and disconnect the propeller shaft from the transfer flange.
- (c) Use a rope to suspend the front edge of the propeller shaft.
- (d) Remove the 2 mounting bolts and center support bearing.
- (e) Place matchmarks on the differential and propeller shaft flanges.
- (f) Remove the 4 bolts, washers and nuts.
- (g) Remove the propeller shaft from the differential.

