

REMOVAL


NOTICE:

- If the wiring connector of the SRS is disconnected with the ignition switch in the ON position, DTCs will be recorded.
- Never use airbag parts from another vehicle. When replacing parts, replace them with new ones.
- Never reuse an airbag sensor assembly if the airbag has previously deployed in a collision.

1. PRECAUTION (SEE PAGE RS-1 AND RS-3)
2. DISCONNECT CABLE FROM NEGATIVE BATTERY TERMINAL

Wait for 90 seconds after disconnecting the cable to prevent the airbag working.

3. Standard cab:
Access cab (w/o Large type console box):
Double cab (Split type seat):
REMOVE LOWER CENTER COVER
(SEE PAGE BO-111)
4. Access cab (w/ Large type console box):
Double cab:
REMOVE SHIFTING HOLE COVER
(SEE PAGE BO-111)
5. Access cab (w/ Large type console box):
Double cab:
REMOVE UPPER CONSOLE PANEL
(SEE PAGE BO-111)
6. Access cab (w/ Large type console box):
Double cab:
REMOVE REAR CONSOLE BOX
(SEE PAGE BO-111)
7. Access cab (w/ Large type console box):
Double cab:
REMOVE FRONT CONSOLE BOX
(SEE PAGE BO-111)

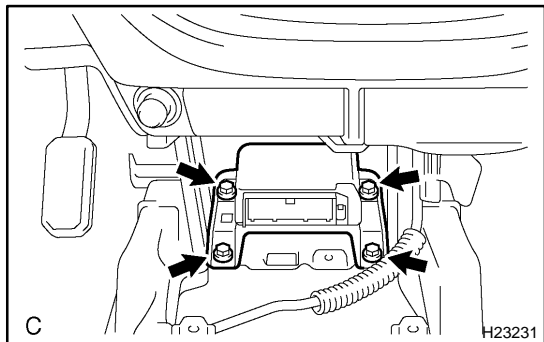

8. REMOVE AIRBAG SENSOR ASSEMBLY
 - (a) Disconnect the holder (with connectors) from the airbag sensor assembly.
 - (b) Remove the 4 bolts and airbag sensor assembly.