

REPLACEMENT

REPLACEMENT REQUIREMENTS

In the following cases, replace the airbag sensor assembly with a new one.

- The SRS has been deployed in a collision.
- The airbag sensor assembly has been found to be faulty in troubleshooting.
- The airbag sensor assembly has been dropped.

CAUTION:

For removal and installation of the airbag sensor assembly, see page [RS-101](#) and [RS-104](#). Be sure to follow the correct procedure.