

## INSTALLATION

### HINT:

- Use the same procedures for the RH side and LH side.
- The procedures listed below are for the LH side.

### 1. INSTALL CURTAIN SHIELD AIRBAG ASSEMBLY

- (a) Install the curtain shield airbag assembly with the 13 bolts.


**Torque: 9.8 N·m (100 kgf·cm, 7 ft·lbf)**

### CAUTION:

Pay attention not to twist the deployment section of the curtain shield airbag assembly.

### NOTICE:

- If the curtain shield airbag assembly has been dropped, or there are cracks, dents or other defects in the case or connector, replace the curtain shield airbag assembly with a new one.
- When installing the curtain shield airbag assembly, take care that it is not pinched between other parts.
- Never use airbag parts from another vehicle. When replacing parts, replace them with new ones.

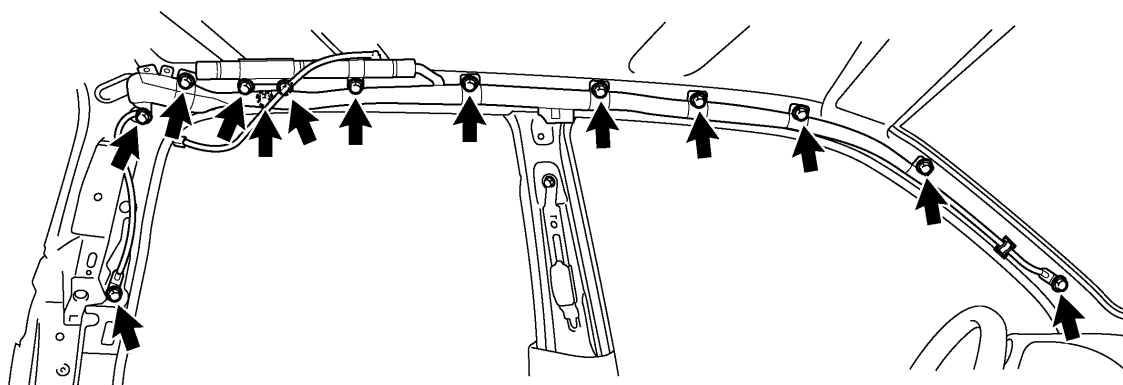

C

H23220

- (b) Connect the connector of the curtain shield airbag assembly.
2. **INSTALL ROOF HEADLINING (SEE PAGE [BO-130](#) AND [BO-138](#))**
  3. **CONNECT CABLE TO NEGATIVE BATTERY TERMINAL**
  4. **INSPECT SRS WARNING LIGHT (SEE PAGE [DI-1839](#))**