

REMOVAL

HINT:

- Use the same procedures for the RH side and LH side.
- The procedures listed below are for the LH side.

NOTICE:

- If the wiring connector of the SRS is disconnected and the ignition switch is in the ACC or ON position, DTCs will be recorded.
- Never use airbag parts from another vehicle. When replacing parts, replace them with new ones.

1. PRECAUTION (SEE PAGE [RS-1](#) AND [RS-3](#))
2. DISCONNECT CABLE FROM NEGATIVE BATTERY TERMINAL

Wait for 90 seconds after disconnecting the cable to prevent the airbag working.

3. REMOVE ROOF HEADLINING (SEE PAGE [BO-126](#) AND [BO-133](#))

4. REMOVE CURTAIN SHIELD AIRBAG ASSEMBLY

- (a) Disconnect the curtain shield airbag connector.

NOTICE:

When handling the airbag connector, take care not to damage the airbag wire harness.

- (b) Remove the 13 bolts and the curtain shield airbag assembly.

