

REMOVAL

HINT:

- Use the same procedures for the RH side and LH side.
- The procedures listed below are for the LH side.


NOTICE:

- If the wiring connector of the SRS is disconnected with the ignition switch in the ON position, DTCs will be recorded.
- Never use airbag parts from another vehicle. When replacing parts, replace them with new ones.
- Never reuse a curtain shield airbag sensor assembly if the airbag has previously deployed in a collision.

1. PRECAUTION (SEE PAGE RS-1 AND RS-3)
2. DISCONNECT CABLE FROM NEGATIVE BATTERY TERMINAL

Wait for 90 seconds after disconnecting the cable to prevent the airbag working.

3. REMOVE REAR DOOR SCUFF PLATE (SEE PAGE BO-133)
4. REMOVE BACK PANEL TRIM ASSEMBLY (SEE PAGE BO-133)
5. REMOVE REAR SEAT OUTER BELT FLOOR ANCHOR (SEE PAGE BO-133)
6. REMOVE QUARTER TRIM PANEL LOWER LH (SEE PAGE BO-133)
7. REMOVE REAR SEAT OUTER BELT RETRACTOR (SEE PAGE BO-236)

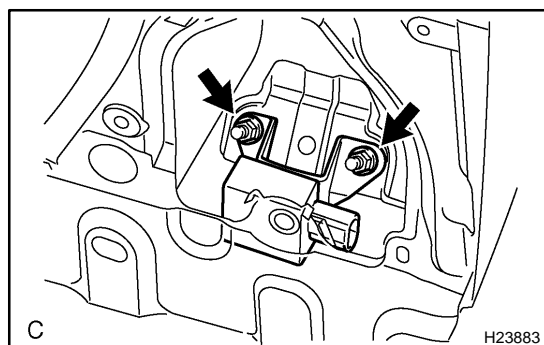

8. REMOVE CURTAIN SHIELD AIRBAG SENSOR ASSEMBLY LH

- (a) Disconnect the curtain shield airbag sensor assembly LH connector.

NOTICE:

Disconnect the connector with the sensor assembly installed.

- (b) Remove the 2 nuts and curtain shield airbag sensor assembly LH.