

REPLACEMENT

REPLACEMENT REQUIREMENTS

In the following cases, replace the curtain shield airbag sensor assembly with a new one.

- The curtain shield airbag assembly has been deployed in a collision.
- The curtain shield airbag sensor assembly has been found to be faulty in troubleshooting.
- The curtain shield airbag sensor assembly has been dropped.

CAUTION:

For removal and installation procedures of the curtain shield airbag sensor assembly, see page [RS-118](#) and [RS-122](#). Be sure to follow the correct procedure.