



INSTALLATION

HINT:

- Use the same procedures for the RH side and LH side.
- The procedures listed below are for the LH side.

NOTICE:

- **Never use SRS parts from another vehicle. When replacing parts, replace them with new ones.**
- **Never reuse the front airbag sensor involved in a collision when the airbag has deployed.**
- **If the front airbag sensor center has been dropped, or there are any cracks, dents or other defects in the case, bracket or connector, replace it with a new one.**
- **When installing the front airbag sensor center, be careful that the SRS wiring does not interfere with other parts and that it is not pinched between other parts.**
- **After installing, shake the front airbag sensor to check that there is no looseness.**

1. INSTALL FRONT AIRBAG SENSOR LH

- (a) Install the front airbag sensor LH with the 2 nuts.

Torque: 17.5 N·m (179 kgf·cm, 13 ft·lbf)

- (b) Connect the front airbag sensor connector.

2. CONNECT CABLE TO NEGATIVE BATTERY TERMINAL

3. INSPECT SRS WARNING LIGHT (SEE PAGE [DI-1839](#))