



INSTALLATION

NOTICE:

- If the front passenger airbag assembly has been dropped, or there are cracks, dents or other defects in the case or connector, replace the front passenger airbag assembly with a new one.
- When installing the front passenger airbag assembly, take care it is not pinched between other parts.
- Never use airbag parts from another vehicle. When replacing parts, replace them with new ones.

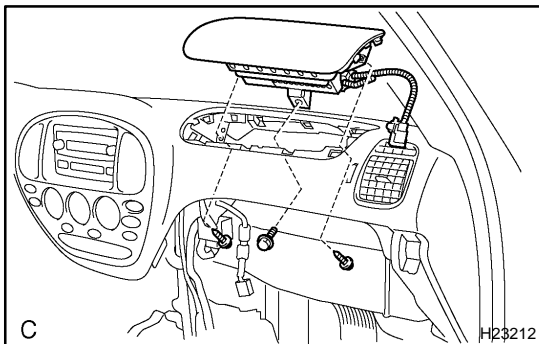

1. **INSTALL FRONT PASSENGER AIRBAG ASSEMBLY**
 - (a) Install the bolt to hold the front passenger airbag assembly and instrument panel reinforcement.
Torque: 20 N·m (204 kgf·cm, 15 ft·lbf)
 - (b) Install the 2 bolts to hold the front passenger airbag assembly and instrument panel.
Torque: 5.0 N·m (51 kgf·cm, 44 in·lbf)
2. **INSTALL LOWER INSTRUMENT COVER**
(SEE PAGE [BO-120](#))
3. Access cab (w/ Large type console box):
Double cab:
INSTALL FRONT CONSOLE BOX
(SEE PAGE [BO-120](#))
4. Access cab (w/ Large type console box):
Double cab:
INSTALL REAR CONSOLE BOX
(SEE PAGE [BO-120](#))
5. Access cab (w/ Large type console box):
Double cab:
INSTALL UPPER CONSOLE PANEL
(SEE PAGE [BO-120](#))
6. Access cab (w/ Large type console box):
Double cab:
INSTALL SHIFTING HOLE COVER
(SEE PAGE [BO-120](#))
7. Standard cab:
Access cab (w/o Large type console box):
Double cab (Split type seat):
INSTALL LOWER CENTER COVER
(SEE PAGE [BO-120](#))

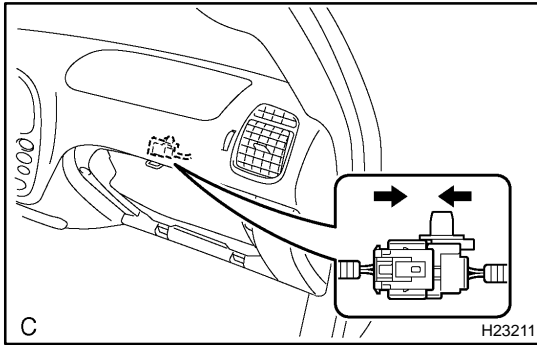

8. **CONNECT AIRBAG CONNECTOR**
 - (a) Connect the airbag connector as shown in the illustration.
 - (b) Attach the connector clamp to the reinforcement.
9. **INSTALL LOWER NO. 2 FINISH PANEL**
(SEE PAGE [BO-120](#))
10. **INSTALL GLOVE COMPARTMENT DOOR**
(SEE PAGE [BO-120](#))
11. **INSTALL LOWER FINISH PANEL**
(SEE PAGE [BO-120](#))
12. Double cab:
INSTALL SIDE PANELS (SEE PAGE [BO-120](#))
13. Double cab:
INSTALL COWL SIDE TRIM BOARDS
(SEE PAGE [BO-120](#))
14. Standard cab:
Access cab:
INSTALL COWL SIDE TRIMS (SEE PAGE [BO-120](#))
15. **INSTALL FRONT DOOR SCUFF PLATES**
(SEE PAGE [BO-120](#))
16. **CONNECT CABLE TO NEGATIVE BATTERY TERMINAL**
17. **INSPECT SRS WARNING LIGHT** (SEE PAGE [DI-1839](#))