

REMOVAL

NOTICE:


- If the wiring connector of the SRS is disconnected and the ignition switch is in the ON or ACC position, DTCs will be recorded.
- Never use airbag parts from another vehicle. When replacing parts, replace them with new ones.

1. PRECAUTION (SEE PAGE RS-1 AND RS-3)
2. DISCONNECT CABLE FROM NEGATIVE BATTERY TERMINAL

Wait for 90 seconds after disconnecting the cable to prevent the airbag working.

3. REMOVE FRONT DOOR SCUFF PLATES
(SEE PAGE BO-111)
4. Standard cab:
Access cab:
REMOVE COWL SIDE TRIMS (SEE PAGE BO-111)
5. Double cab:
REMOVE COWL SIDE TRIM BOARDS
(SEE PAGE BO-111)
6. Double cab:
REMOVE SIDE PANELS (SEE PAGE BO-111)
7. REMOVE LOWER FINISH PANEL
(SEE PAGE BO-111)
8. REMOVE GLOVE COMPARTMENT DOOR
(SEE PAGE BO-111)
9. REMOVE LOWER NO. 2 FINISH PANEL
(SEE PAGE BO-111)
10. Standard cab:
Access cab (w/o Large type console box):
Double cab (Split type seat):
REMOVE LOWER CENTER COVER
(SEE PAGE BO-111)
11. Access cab (w/ Large type console box):
Double cab:
REMOVE SHIFTING HOLE COVER
(SEE PAGE BO-111)
12. Access cab (w/ Large type console box):
Double cab:
REMOVE UPPER CONSOLE PANEL
(SEE PAGE BO-111)
13. Access cab (w/ Large type console box):
Double cab:
REMOVE REAR CONSOLE BOX
(SEE PAGE BO-111)
14. Access cab (w/ Large type console box):
Double cab:
REMOVE FRONT CONSOLE BOX
(SEE PAGE BO-111)

**15. REMOVE LOWER INSTRUMENT COVER
(SEE PAGE [BO-111](#))**

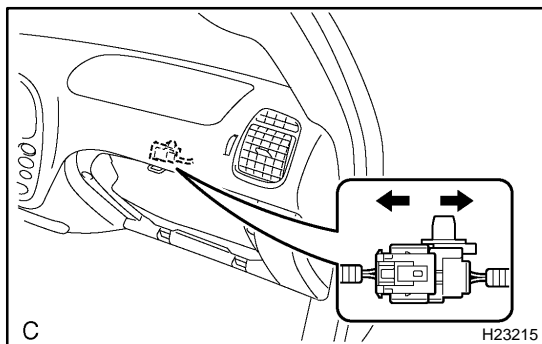


16. REMOVE FRONT PASSENGER AIRBAG ASSEMBLY

- (a) Using a clip remover, disengage the connector clamp.
- (b) Disconnect the airbag connector.

NOTICE:

When handling the airbag connector, take care not to damage the airbag wire harness.

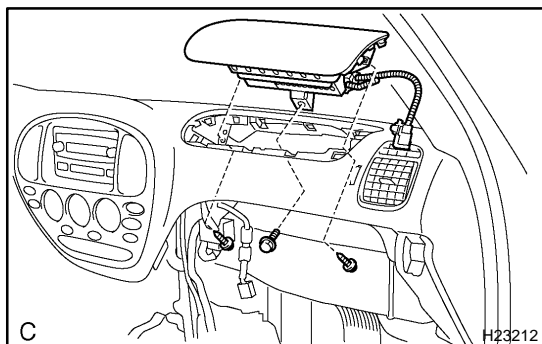

- (c) Remove the bolt holding the front passenger airbag assembly and instrument panel.
- (d) Remove the 2 bolts holding the front passenger airbag assembly and instrument panel reinforcement.
- (e) Remove the front passenger airbag assembly.

CAUTION:

- **Do not store the front passenger airbag assembly with the airbag deployment side facing downward.**
- **Never disassemble the front passenger airbag assembly.**