

## REMOVAL

### NOTICE:

- If the wiring connector of the SRS is disconnected with the ignition switch in the ON position, DTCs will be recorded.
- Never use SRS parts from another vehicle. When replacing the parts, replace them with new ones.
- Never reuse a seat position sensor assembly if an airbag has previously deployed in a collision.

1. PRECAUTION (SEE PAGE [RS-1](#) AND [RS-3](#))

2. DISCONNECT CABLE FROM NEGATIVE BATTERY TERMINAL

Wait for 90 seconds after disconnecting the cable to prevent the airbag working.

3. Bench type:

REMOVE FRONT SEAT ASSEMBLY  
(SEE PAGE [BO-166](#))

4. Split type:

REMOVE FRONT SEAT ASSEMBLY  
(SEE PAGE [BO-188](#))

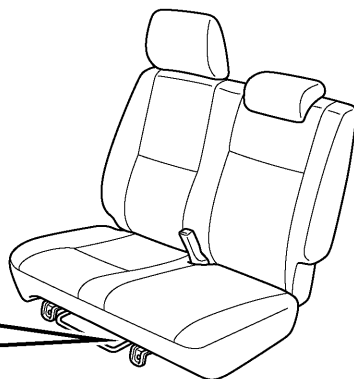
5. Split type:

REMOVE SEAT POSITION SENSOR PROTECTOR

Remove the seat position sensor protector from the seat position sensor.

**6. REMOVE SEAT POSITION SENSOR**

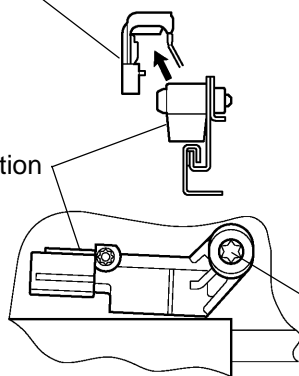
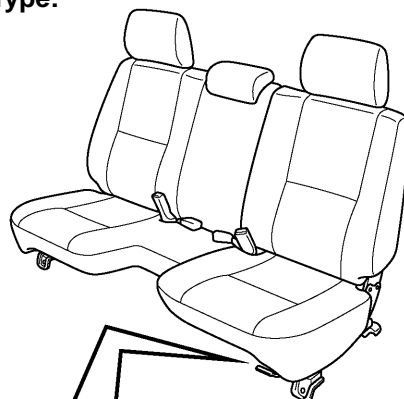
- (a) Disconnect the connector from the seat position sensor.
- (b) Using a torx® socket wrench (T30), remove the torx® screw and the seat position sensor.

**Split Type:**

Seat Position Sensor Protector

Seat Position Sensor

Torx® Screw

**Bench Type:**

Seat Position Sensor

Torx® Screw

