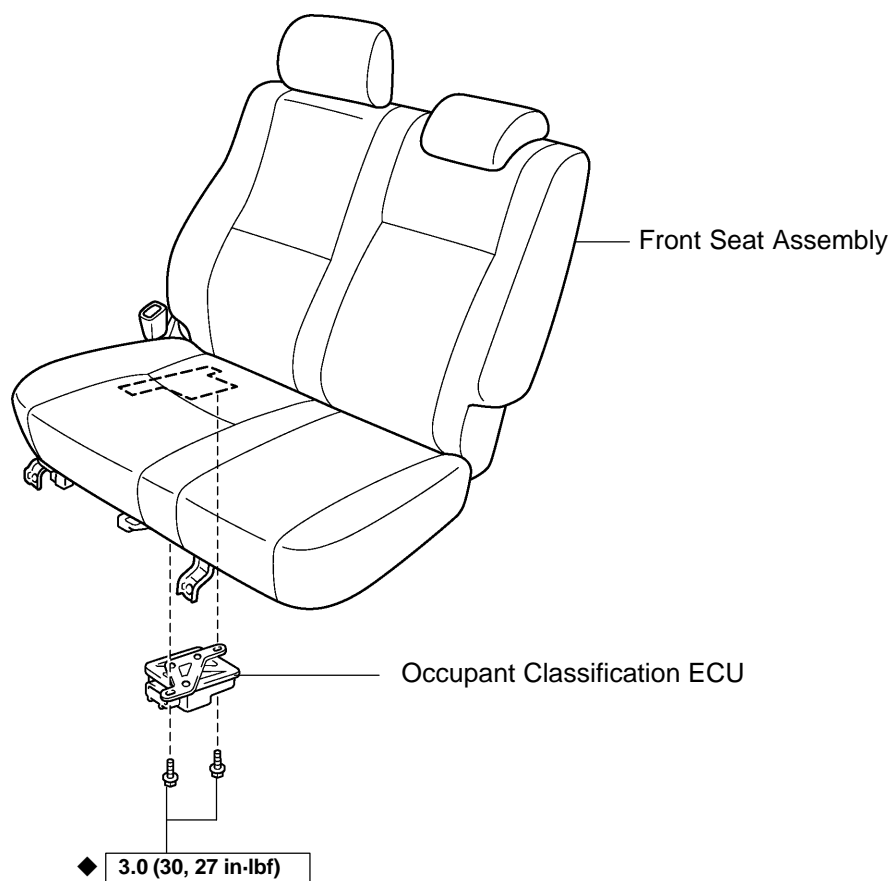


OCCUPANT CLASSIFICATION ECU (Except Separate Seat) COMPONENTS

RS0UU-06

Split Type:


N

◆ Non-reusable part

N·m (kgf·cm, ft·lbf) : Specified torque

cmc0236

Bench Type:

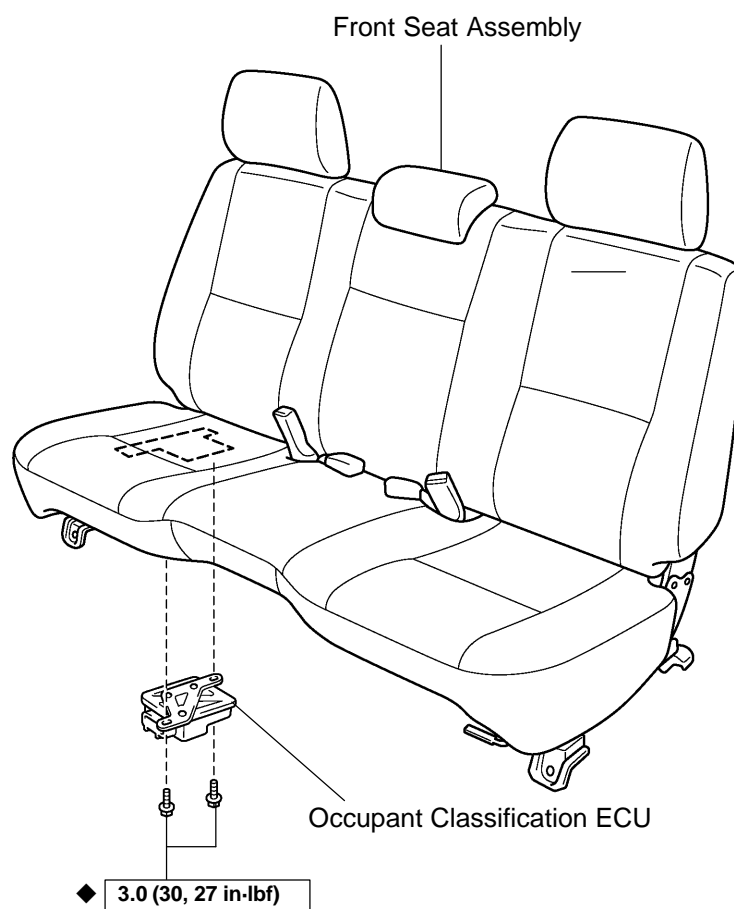

◆ Non-reusable part

N N·m (kgf·cm, ft·lbf) : Specified torque