

## REPLACEMENT

### REPLACEMENT REQUIREMENTS

In the following cases, replace the seat belt tension sensor with a new one:

- The seat belt tension sensor has been found to be faulty in troubleshooting.
- The seat belt tension sensor has been dropped.

### CAUTION:

For removal and installation procedures of the seat belt tension sensor, see page RS-167 and RS-170. Be sure to follow the correct procedure.