


## INSTALLATION

### NOTICE:

- Never use SRS parts from another vehicle. When replacing parts, replace them with new ones.
- Never reuse the occupant classification ECU involved in a collision when the airbag has deployed.
- If the occupant classification ECU has been dropped, or there are any cracks, dents or other defects in the case, bracket or connector, replace it with a new one.
- When installing the seat position sensor assembly center, be careful that the SRS wiring does not interfere with other parts and that it is not pinched between other parts.

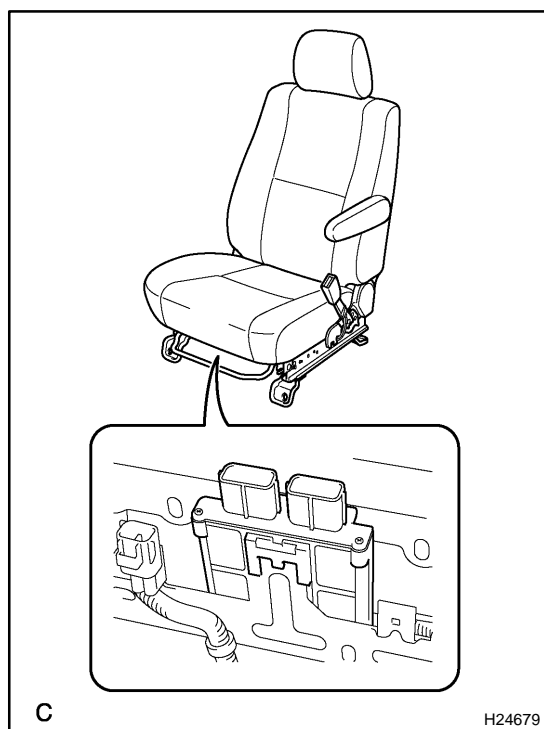

1. **INSTALL OCCUPANT CLASSIFICATION ECU**
  - (a) Install the occupant classification ECU.
  - (b) Connect the 2 connectors to the occupant classification ECU.
2. **INSTALL FRONT SEAT ASSEMBLY RH**  
(SEE PAGE [BO-153](#))
3. **CONNECT CABLE TO NEGATIVE BATTERY TERMINAL**
4. **INSPECT SRS WARNING LIGHT** (SEE PAGE [DI-1839](#))