

## REMOVAL


### NOTICE:

- If the wiring connector of the SRS is disconnected with the ignition switch in the ON position, DTCs will be recorded.
- Never use SRS parts from another vehicle. When replacing the parts, replace them with new ones.
- Never reuse an occupant classification ECU if the airbag has previously deployed in a collision.

1. PRECAUTION (SEE PAGE RS-1 AND RS-3)
2. DISCONNECT CABLE FROM NEGATIVE BATTERY TERMINAL

Wait for 90 seconds after disconnecting the cable to prevent the airbag working.

3. REMOVE FRONT SEAT ASSEMBLY RH  
(SEE PAGE BO-141)

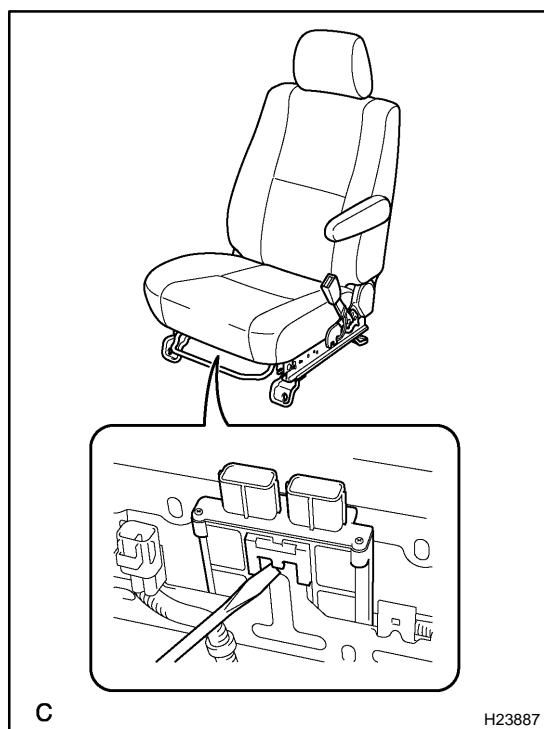

C

H23887

4. REMOVE OCCUPANT CLASSIFICATION ECU

- (a) Disconnect the 2 connectors from the occupant classification ECU.
- (b) Using a screwdriver, remove the occupant classification ECU.