

REPLACEMENT

REPLACEMENT REQUIREMENTS

In the following cases, replace the occupant classification ECU with a new one.

- The occupant classification ECU has been found to be faulty in troubleshooting.
- The occupant classification ECU has been dropped.

CAUTION:

For removal and installation procedures of the occupant classification ECU, see page [RS-125](#) and [RS-128](#). Be sure to follow the correct procedure.