

INSPECTION


1. INSPECT PASSENGER AIRBAG MANUAL AUTO-OFF SWITCH

Measure the resistance between terminals 1 and 2 of the passenger airbag manual AUTO-OFF switch.

Result:

Switch Condition	Tester Connection	Specified Condition
ON	1 – 2	320 to 480 Ω
OFF	1 – 2	80 to 120 Ω


If the result is not as specified, replace the switch.

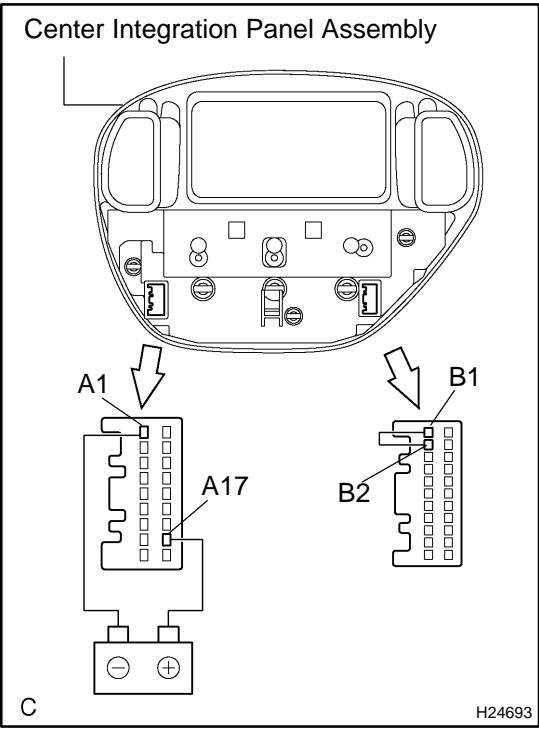

2. INSPECT PASSENGER AIRBAG ON/OFF INDICATOR OPERATION

- (a) Remove the center cluster integration panel assembly (see page [BO-111](#)).
- (b) Using a service wire, connect terminals B1 and B2.
- (c) Connect the battery's positive (+) lead from the battery to terminal A17 and the negative (-) lead to terminal A1.
- (d) Check that the indicator ON light illuminates.

If it does not illuminate, replace the center cluster integration panel assembly.

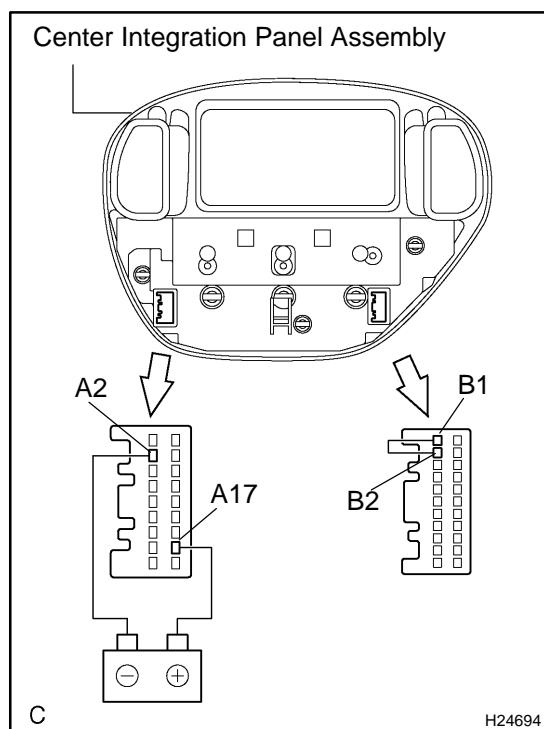

- (e) Using a service wire, connect terminals B1 and B2.
 - (f) Connect the battery's positive (+) lead from the battery to terminal A17 and the negative (-) lead to terminal A2.
 - (g) Check that the indicator OFF light illuminates.
- If it does not illuminate, replace the center cluster integration panel assembly.