



REMOVAL

1. **PRECAUTION (SEE PAGE RS-1 AND RS-3)**
2. **DISCONNECT CABLE FROM NEGATIVE BATTERY TERMINAL**

Wait for 90 seconds after disconnecting the cable to prevent the airbag working.

3. **REMOVE PASSENGER AIRBAG MANUAL AUTO-OFF SWITCH**

- (a) Using a screwdriver, release the 2 claws and remove the passenger airbag manual AUTO-OFF switch.

HINT:

Tape up the screwdriver tip before use.

- (b) Disconnect the connector.