

REMOVAL

HINT:

- Use the same procedures for the RH side and LH side.
- The procedures listed below are for the LH side.

NOTICE:

- If the wiring connector of the SRS is disconnected and the ignition switch is in the ON or ACC position, DTCs will be recorded.
- Never use airbag parts from another vehicle. When replacing parts, replace them with new ones.

1. PRECAUTION (SEE PAGE RS-1 AND RS-3)
2. DISCONNECT CABLE FROM NEGATIVE BATTERY TERMINAL

Wait for 90 seconds after disconnecting the cable to prevent the airbag working.

3. REMOVE SEAT TRACK COVERS

Using a screwdriver, remove the 2 seat track covers.

HINT:

Tape the screwdriver tip before use.


4. REMOVE FRONT SEAT

- (a) Remove the 4 bolts.
- (b) Disconnect the connectors.
- (c) Remove the front seat.

CAUTION:

Be careful not to damage the body.

5. REMOVE HEADREST

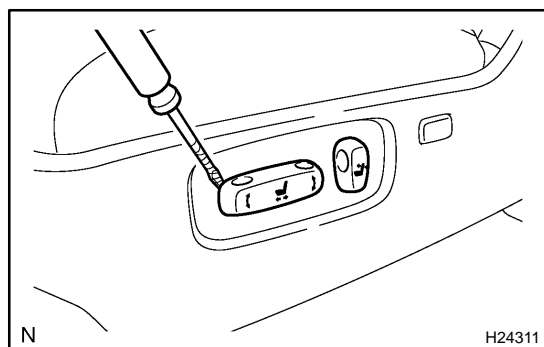


6. REMOVE SLIDE KNOB AND RECLINING KNOB

Using a screwdriver, remove the slide knob and reclining knob.


HINT:

Tape the screwdriver tip before use.

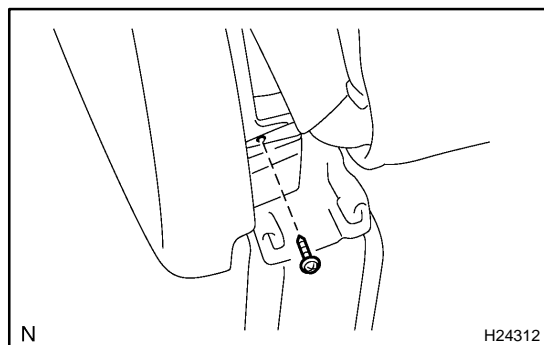


7. REMOVE SEAT CUSHION LOWER SHIELD, SEAT CUSHION OUTER SHIELD AND SEAT CUSHION INNER SHIELD


- (a) Remove the screw from the seat cushion outer shield.
- (b) Perform the same procedure as for the seat cushion inner shield.

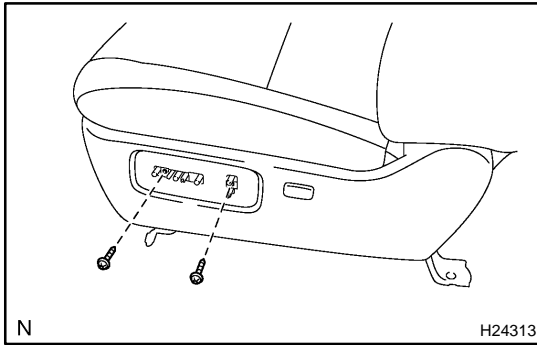

- (c) Remove the 2 screws from the seat cushion outer shield.
- (d) Remove the screw from the seat cushion inner shield.

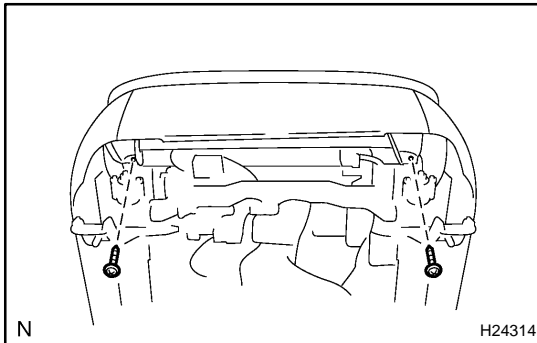

- (e) Remove the 2 screws from the seat cushion lower shield.
- (f) Disconnect the lumbar switch connector from the lumbar switch, and remove the seat cushion lower shield, outer shield and inner shield.

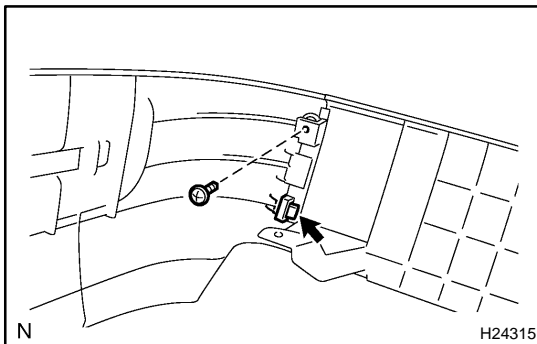

- (g) Remove the screw and separate the seat cushion lower shield and seat cushion outer shield.
- (h) Perform the same procedure as for the other side.

8. REMOVE FRONT SEAT INNER BELT


- (a) Disconnect the wire harness clamps and connectors.
- (b) Remove the nut and front seat inner belt.

9. REMOVE LUMBAR SWITCH

Remove the 2 screws and lumbar switch from the seat cushion outer shield.


10. REMOVE POWER SEAT SWITCH

Remove the 3 screws and power seat switch.

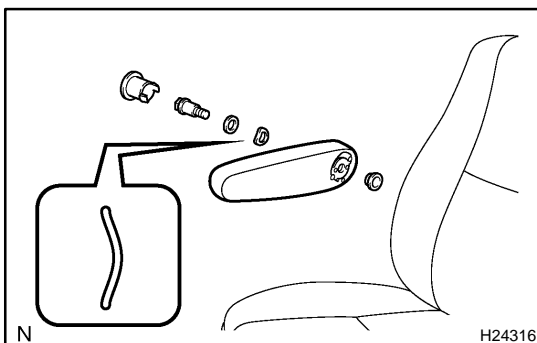


11. REMOVE ARMREST ASSEMBLY


- (a) Using a screwdriver, remove the armrest cap.
- (b) Remove the bolt, armrest spacer, armrest lock plate and armrest assembly.
- (c) Remove the spacer from the armrest assembly.

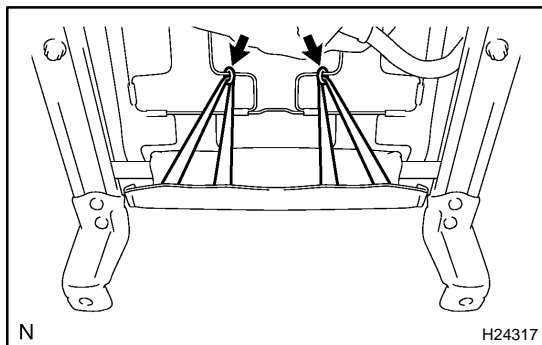**12. REMOVE SEATBACK COVER AND PAD**

- (a) Remove the seatback cover belt from the seat frame assembly.
- (b) Open the fastener.

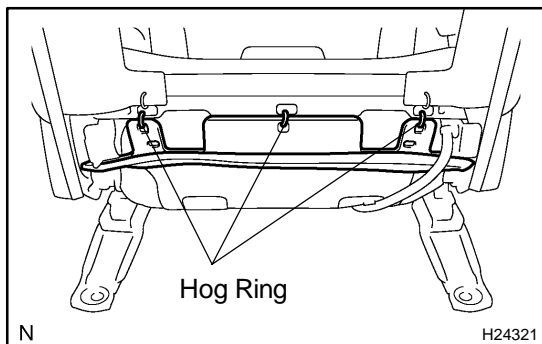

- (c) Remove the hog rings from the seat frame assembly.

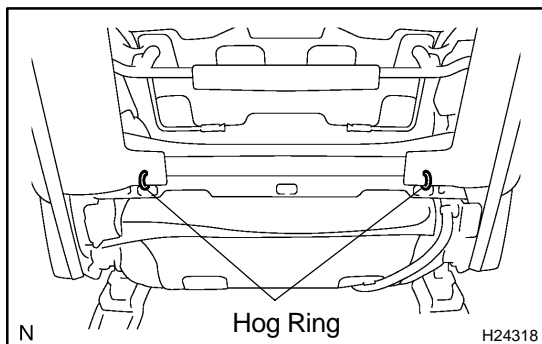

- (d) Remove the hog rings from the seat frame assembly.
- (e) Remove the 2 headrest supports from the seat frame assembly.
- (f) Remove the seatback cover and pad from the seat frame assembly.