

INSPECTION

1. VEHICLE NOT INVOLVED IN A COLLISION

Perform a diagnostic system check (see page [DI-1851](#)).

2. VEHICLE INVOLVED IN A COLLISION

- (a) Perform a diagnostic system check (see page [DI-1851](#)).
- (b) Even if the airbag was not deployed, perform a visual check for damage to the seat position sensor assembly. If there are any defects mentioned below, replace the seat position sensor assembly with a new one:
 - Cracks, dents or chips in the case.
 - Cracks or other damage to the connector.

CAUTION:

For removal and installation procedures of the seat position sensor assembly, see page [RS-118](#) and [RS-122](#). Be sure to follow the correct procedure.