

INSTALLATION

CAUTION:

- If the steering wheel pad has been dropped, or there are cracks, dents or other defects in the case or connector, replace the steering wheel pad with a new one.
 - When installing the steering wheel pad, take care that it is not pinched between other parts.
 - Never use airbag parts from another vehicle. When replacing parts, replace them with new ones.
1. INSTALL SPIRAL CABLE (SEE PAGE [SR-28](#) AND [SR-42](#))
 2. INSTALL STEERING COLUMN COVER LOWER (SEE PAGE [SR-28](#) AND [SR-42](#))
 3. INSTALL STEERING WHEEL (SEE PAGE [SR-28](#) AND [SR-42](#))
 4. INSTALL STEERING WHEEL PAD (SEE PAGE [SR-28](#) AND [SR-42](#))
 5. CONNECT CABLE TO NEGATIVE BATTERY TERMINAL
 6. INSPECT SRS WARNING LIGHT (SEE PAGE [DI-1839](#))