

REPLACEMENT

REPLACEMENT REQUIREMENTS

In the following cases, replace the steering wheel pad, steering wheel or spiral cable with a new one.

Case	Replacing part
The airbag has been deployed.	Steering wheel pad
The steering wheel pad has been found to be faulty in troubleshooting.	Steering wheel pad
The spiral cable has been found to be faulty in troubleshooting.	Spiral cable
The steering wheel pad has been found to be faulty while checking items. (see page RS-24)	Steering wheel pad
The steering wheel has been found to be faulty while checking items. (see page RS-24)	Steering wheel
The spiral cable has been found to be faulty while checking items. (see page RS-24)	Spiral cable
The steering wheel pad has been dropped.	Steering wheel pad

CAUTION:

For removal and installation of the steering wheel pad, see page [RS-23](#) and [RS-33](#). Be sure to follow the correct procedure.