

INSTALLATION

1. INSTALL DIFFERENTIAL MOUNTING CUSHIONS

- (a) Install the 2 front mounting cushions with the 5 bolts.

Torque: 157 N·m (1,600 kgf·cm, 116 ft·lbf)

- (b) Install the rear mounting cushion with the 2 bolts.

Torque: 108 N·m (1,100 kgf·cm, 80 ft·lbf)

2. INSTALL FRONT DIFFERENTIAL CARRIER

- (a) Jack up the front differential.

- (b) Install the 2 front mounting bolts.

Torque: 137 N·m (1,400 kgf·cm, 101 ft·lbf)

- (c) Using a hexagon (12 mm) wrench, install the rear mounting nut.

Torque: 87 N·m (890 kgf·cm, 64 ft·lbf)

- (d) Remove the jack.

3. INSTALL TUBE WITH WIRE HARNESS ASSEMBLY

- (a) Install the tube with wire harness assembly with the bolt.

Torque: 13 N·m (130 kgf·cm, 9 ft·lbf)

- (b) Connect the actuator connector, vacuum hose and breather hose.

4. CONNECT FRONT PROPELLER SHAFT (See page [PR-15](#))

5. INSTALL DRIVE SHAFTS (See page [SA-34](#))

6. FILL DIFFERENTIAL WITH HYPOID GEAR OIL (See page [SA-36](#))