


REMOVAL

1. **DRAIN DIFFERENTIAL OIL**
2. **REMOVE DRIVE SHAFTS** (See page [SA-29](#))
3. **DISCONNECT FRONT PROPELLER SHAFT**
(See page [PR-10](#))

HINT:

Support the front propeller shaft securely.

4. **REMOVE TUBE WITH WIRE HARNESS ASSEMBLY**
 - (a) Disconnect the breather hose, vacuum hose and actuator connector.
 - (b) Remove the bolt and tube with wire harness assembly.
5. **REMOVE FRONT DIFFERENTIAL CARRIER**
 - (a) Support the front differential with a jack.

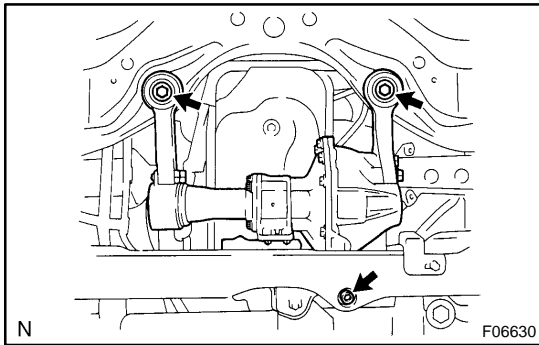

- (b) Using a hexagon (12 mm) wrench, remove the rear mounting nut.
- (c) Remove the 2 front mounting bolts.
- (d) Lower the jack and remove the front differential carrier.
6. **REMOVE DIFFERENTIAL MOUNTING CUSHIONS**
 - (a) Remove the 2 bolts and rear mounting cushion.
 - (b) Remove the 5 bolts and 2 front mounting cushions.