


INSTALLATION

1. INSTALL STABILIZER BAR LINKS

- (a) Install the 2 bushings, retainers and stabilizer bar link to the stabilizer bar.
- (b) Hold the stabilizer bar link, and install the nut.
Torque: 19 N·m (190 kgf-cm, 14 ft-lbf)
- (c) Use the same procedures described above to the other side.

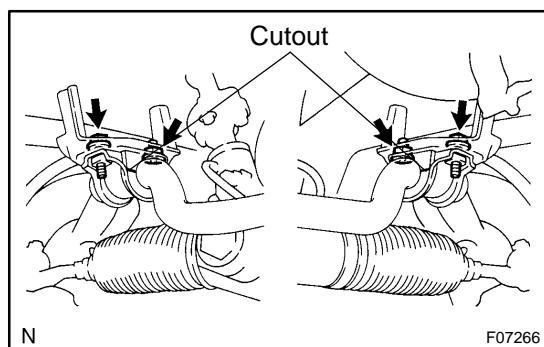

2. INSTALL STABILIZER BAR

- (a) Install the 2 bushings with their cutouts facing to the rearward to the stabilizer bar.
- (b) Install the stabilizer bar and 2 brackets with the nut and bolts.

Torque: 37 N·m (375 kgf-cm, 27 ft-lbf)

3. CONNECT STABILIZER BAR LINKS TO LOWER SUSPENSION ARM

Torque: 69 N·m (700 kgf-cm, 51 ft-lbf)

HINT:

If the ball joint turns together with the nut, use a hexagon (6 mm) wrench to hold the nut.