

INSTALLATION


1. INSTALL LEAF SPRING

Install the shackle and leaf spring with the 3 bolts, washers and nuts.

Torque: 170 N·m (1,735 kgf·cm, 125 ft·lbf)

HINT:

After stabilizing the suspension, torque the nuts.

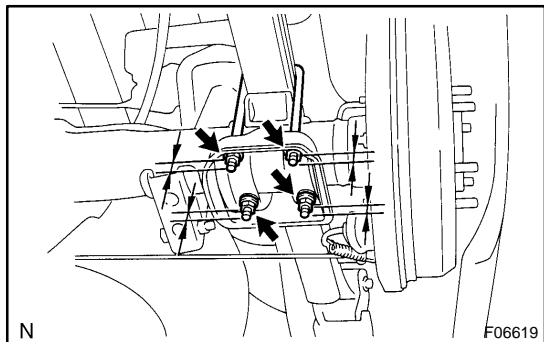

2. INSTALL U-BOLTS

Install the spring bumper, spring seat and 2 U-bolts with the 4 washers and nuts.

Torque: 133 N·m (1,350 kgf·cm, 98 ft·lbf)

HINT:

Tighten the U-bolts so that the lengths of all the U-bolts under the spring seat are the same.

3. INSTALL REAR WHEEL

Torque: 110 N·m (1,150 kgf·cm, 83 ft·lbf)

4. REMOVE SAFETY STANDS