


REMOVAL

1. SUPPORT BODY WITH SAFETY STANDS


- (a) Jack up and support the body on safety stands.
- (b) Lower the axle housing until the leaf spring tension is free, and keep it at this position.

2. REMOVE REAR WHEEL

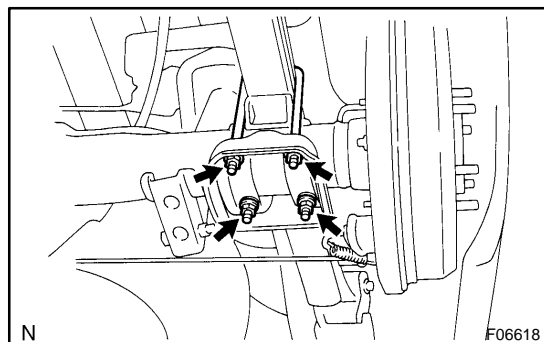


3. REMOVE U-BOLTS

- (a) Remove the 4 U-bolt mounting nuts and washers.
- (b) Remove the spring seat and 2 U-bolts.
- (c) Remove the spring bumper.

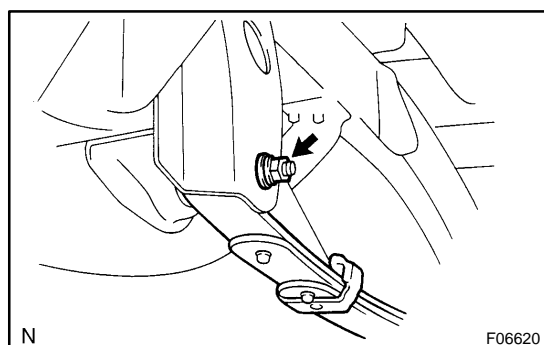

4. REMOVE LEAF SPRING

- (a) Remove the nut, washer and bolt.

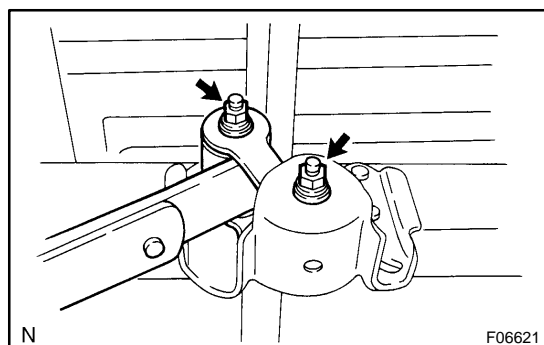

- (b) Remove the 2 nuts, washers, bolts, shackle and leaf spring.